

SECTION DEF

DEFROGGER

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

| | | | |
|---|----|--|----|
| BASIC INSPECTION | 3 | Component Function Check | 13 |
| DIAGNOSIS AND REPAIR WORKFLOW | 3 | Diagnosis Procedure | 13 |
| Work Flow | 3 | Component Inspection | 15 |
| SYSTEM DESCRIPTION | 4 | DOOR MIRROR DEFROGGER | 16 |
| REAR WINDOW DEFROGGER SYSTEM | 4 | Description | 16 |
| System Diagram | 4 | Component Function Check | 16 |
| System Description | 4 | Diagnosis Procedure | 16 |
| Component Parts Location | 5 | DRIVER SIDE DOOR MIRROR DEFROGGER ... | 17 |
| Component Description | 5 | Description | 17 |
| DIAGNOSIS SYSTEM (BCM) | 7 | Component Function Check | 17 |
| COMMON ITEM | 7 | Diagnosis Procedure | 17 |
| COMMON ITEM : CONSULT-III Function (BCM - | | PASSENGER SIDE DOOR MIRROR DEFOG- | |
| COMMON ITEM) | 7 | GER | 19 |
| REAR WINDOW DEFROGGER | 8 | Description | 19 |
| REAR WINDOW DEFROGGER : CONSULT-III | | Component Function Check | 19 |
| Function (BCM - REAR DEFROGGER) | 8 | Diagnosis Procedure | 19 |
| DTC/CIRCUIT DIAGNOSIS | 9 | REAR WINDOW DEFROGGER SYSTEM | 21 |
| POWER SUPPLY AND GROUND CIRCUIT | 9 | Wiring Diagram - DEFROGGER SYSTEM - | 21 |
| BCM | 9 | ECU DIAGNOSIS INFORMATION | 26 |
| BCM : Diagnosis Procedure | 9 | BCM (BODY CONTROL MODULE) | 26 |
| REAR WINDOW DEFROGGER SWITCH | 10 | Reference Value | 26 |
| Description | 10 | Wiring Diagram - BCM - | 50 |
| Component Function Check | 10 | Fail-safe | 56 |
| Diagnosis Procedure | 10 | DTC Inspection Priority Chart | 59 |
| REAR WINDOW DEFROGGER RELAY | 11 | DTC Index | 59 |
| Description | 11 | SYMPTOM DIAGNOSIS | 62 |
| Component Function Check | 11 | REAR WINDOW DEFROGGER AND DOOR | |
| Diagnosis Procedure | 11 | MIRROR DEFROGGER DO NOT OPERATE. | 62 |
| Component Inspection | 12 | Diagnosis Procedure | 62 |
| REAR WINDOW DEFROGGER | 13 | REAR WINDOW DEFROGGER DOES NOT | |
| Description | 13 | OPERATE BUT BOTH DOOR MIRROR DE- | |
| | | FOGGERS OPERATE | 63 |
| | | Diagnosis Procedure | 63 |

| | | | |
|---|-----------|--|-----------|
| DOOR MIRROR DEFOGGER DOES NOT OPERATE | 64 | REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE | 66 |
| BOTH SIDES | 64 | Diagnosis Procedure | 66 |
| BOTH SIDES : Diagnosis Procedure | 64 | | |
| DRIVER SIDE | 64 | | |
| DRIVER SIDE : Diagnosis Procedure | 64 | | |
| PASSENGER SIDE | 64 | | |
| PASSENGER SIDE : Diagnosis Procedure | 64 | | |
| ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED | 65 | | |
| Diagnosis Procedure | 65 | | |
| REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE | 66 | PRECAUTION | 67 |
| Diagnosis Procedure | 66 | | |
| PRECAUTION | 67 | PRECAUTIONS | 67 |
| | | Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 67 |
| | | | |
| REMOVAL AND INSTALLATION | 68 | | |
| FILAMENT | 68 | | |
| Inspection and Repair | 68 | | |

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003842774

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much malfunction information (conditions and environment when the malfunction occurred) as possible when the customer brings the vehicle in.

>> GO TO 2.

2. CHECK DTC

Perform self diagnosis using CONSULT-III

Is any DTC detected?

YES >> Refer to [BCS-77, "DTC Index"](#)

NO >> GO TO 3.

3. REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.

Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 4.

4. IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 3. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 5.

5. IDENTIFY MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 6.

6. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 7.

7. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3.

Are all malfunctions corrected?

YES >> INSPECTION END

NO >> GO TO 4.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

REAR WINDOW DEFOGGER SYSTEM

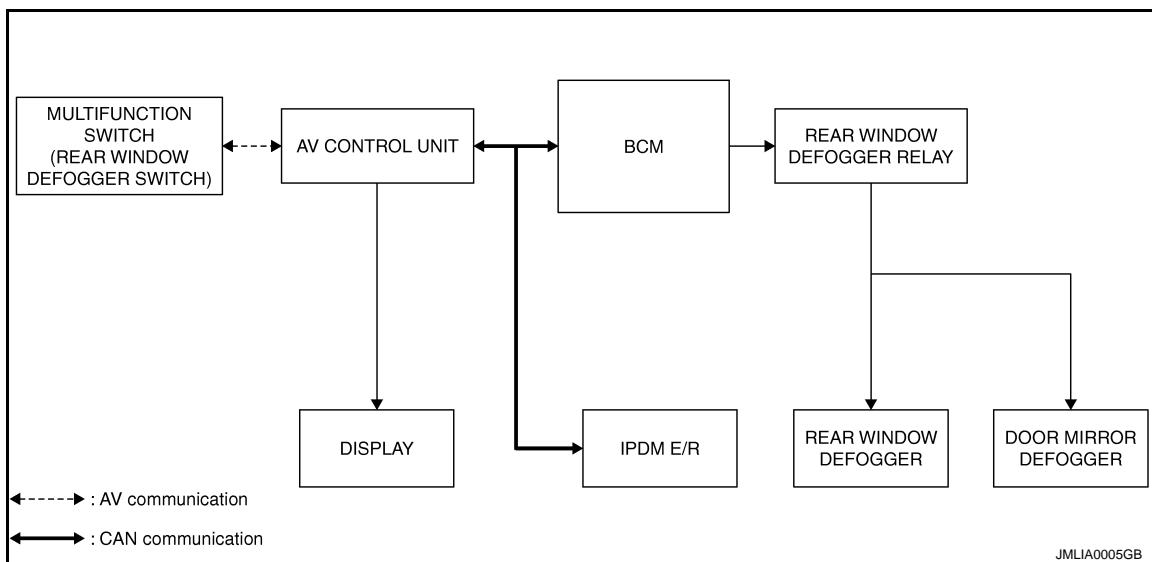
< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

REAR WINDOW DEFOGGER SYSTEM

System Diagram

INFOID:000000003842775



System Description

INFOID:000000003842776

Operation Description

- Turn rear window defogger switch ON when the ignition switch turns ON. Then multifunction switch (rear window defogger switch) transmits rear window defogger switch signal to AV control unit via AV communication. AV control unit transmits rear window defogger switch signal to BCM via CAN communication.
- BCM turns rear window defogger relay ON and transmits rear window defogger control signal to IPDM E/R via CAN communication when rear window defogger switch signal is received.
- Rear window defogger and door mirror defogger (with mirror defogger) are supplied with power and operate when rear window defogger relay turns ON.
- IPDM E/R transmits rear window defogger control signal to AV control unit via CAN communication.
- AV control unit transmits rear defogger indicator signal to multifunction switch (rear window defogger switch) via AV communication, then rear window defogger indicator is illuminated.

Timer function

- BCM turns rear window defogger relay ON for approximately 15 minutes when rear window defogger switch turns ON. It makes rear window defogger and door mirror defogger (with mirror defogger) operate.
- Timer is canceled after pressing rear window defogger switch again during timer operation. Then BCM turns rear window defogger relay OFF. The same reaction also occurs during timer operation, if the ignition switch is turned OFF.

INPUT/OUTPUT SIGNAL CHART


| Switch | Input signal to BCM | BCM function | Actuator |
|-----------------------------|------------------------|---|----------------------|
| Rear window defogger switch | Defogger switch signal | Rear window defogger and Door mirror defogger control | Rear window defogger |
| Push button ignition switch | Ignition signal | | Door mirror defogger |

REAR WINDOW DEFOGGER SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

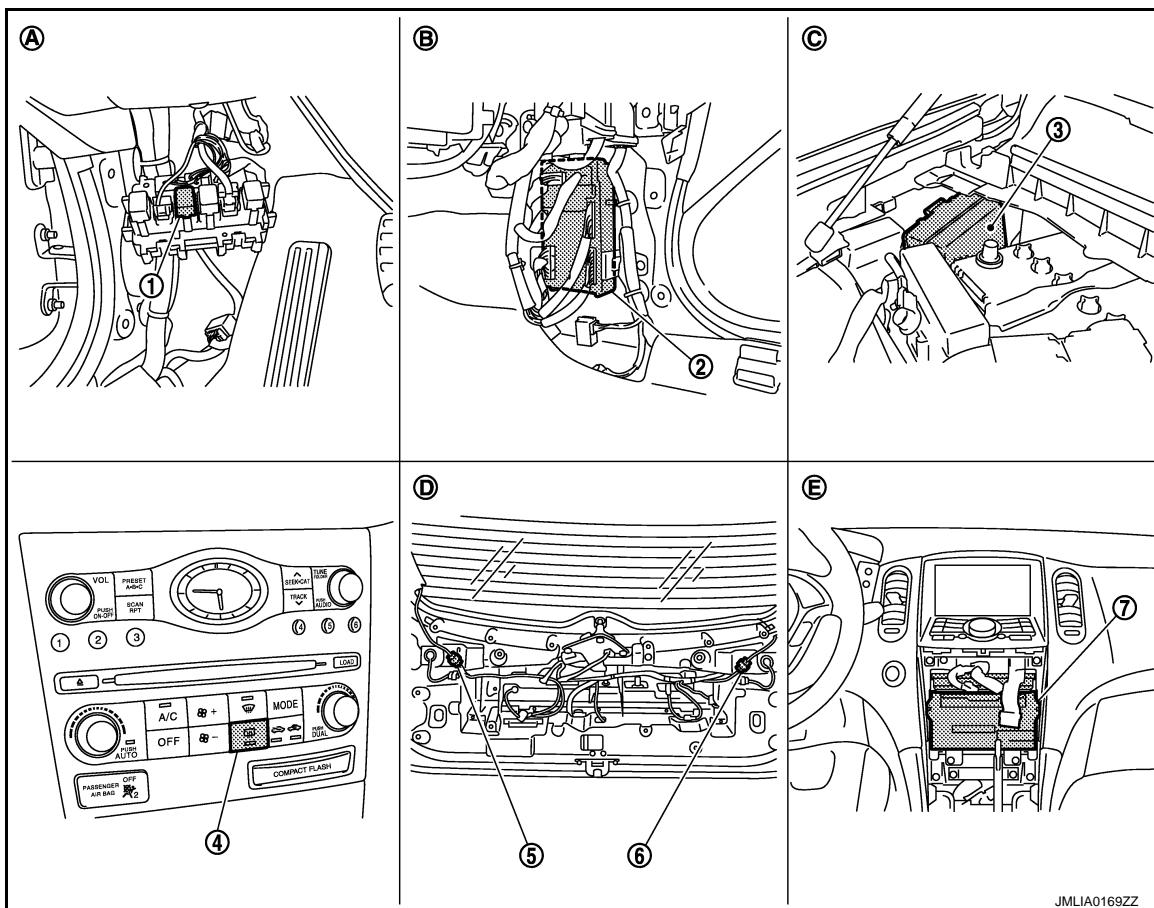INFOID:000000003842777



JMLIA0169ZZ

- | | | |
|---|--|--|
| 1. Rear window defogger relay (built-in relay box) | 2. BCM M118, M119, M122, M123 | 3. IPDM E/R E6 |
| 4. Rear window defogger switch (built-in multifunction switch M72) | 5. Rear window defogger connector D108 | 6. Rear window defogger connector D120 |
| 7. AV control unit <ul style="list-style-type: none"> • With NAVI M87,M88 • Without NAVI M83, M85 | | |
| A. Dash side lower (driver side) | B. Dash side lower (passenger side) | C. Engine room dash panel (RH) |
| D. Behind back door finisher | E. Behind cluster lid C | |

A
B
C
D
E
F
G
H
I
J

K
DEF

M

N

O

P

Component Description

INFOID:000000003842778

| Item | Function |
|--|---|
| BCM | <ul style="list-style-type: none"> • Operates the rear window defogger relay with the operation of rear window defogger switch. • Performs the timer control of rear window defogger. |
| Rear window defogger relay | <ul style="list-style-type: none"> • Operates the rear window defogger and the door mirror defogger with the control signal from BCM. |
| IPDM E/R | <ul style="list-style-type: none"> • Transmits rear window defogger control signal to AV control unit via CAN communication. |
| Multifunction switch (Rear window defogger switch) | <ul style="list-style-type: none"> • The rear window defogger switch is installed. • Turns the indicator lamp ON when detecting the operation of rear window defogger. |
| AV control unit | <ul style="list-style-type: none"> • Displays the rear window defogger ON to the display when detecting the operation of rear window defogger. |

REAR WINDOW DEFOGGER SYSTEM

< SYSTEM DESCRIPTION >

| | |
|----------------------|--|
| Rear window defogger | <ul style="list-style-type: none">• Heats the heating wire with the power supply from the rear window defogger relay to prevent the rear window from fogging up. |
| Door mirror defogger | <ul style="list-style-type: none">• Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000003842779

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

| Diagnosis mode | Function Description |
|--------------------------|--|
| Work Support | Changes the setting for each system function. |
| Self Diagnostic Result | Displays the diagnosis results judged by BCM. |
| CAN Diag Support Monitor | Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual. |
| Data Monitor | The BCM input/output signals are displayed. |
| Active Test | The signals used to activate each device are forcibly supplied from BCM. |
| Ecu Identification | The BCM part number is displayed. |
| Configuration | This function is not used even though it is displayed. |

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

| System | Sub system selection item | Diagnosis mode | | |
|--------------------------------------|-----------------------------|----------------|--------------|-------------|
| | | Work Support | Data Monitor | Active Test |
| Door lock | DOOR LOCK | x | x | x |
| Rear window defogger | REAR DEFOGGER | | x | x |
| Warning chime | BUZZER | | x | x |
| Interior room lamp timer | INT LAMP | x | x | x |
| Exterior lamp | HEAD LAMP | x | x | x |
| Wiper and washer | WIPER | x | x | x |
| Turn signal and hazard warning lamps | FLASHER | x | x | x |
| — | AIR CONDITIONER* | | x | |
| Intelligent Key system | INTELLIGENT KEY | x | x | x |
| Combination switch | COMB SW | | x | |
| Body control system | BCM | x | | |
| IVIS - NATS | IMMU | | x | x |
| Interior room lamp battery saver | BATTERY SAVER | x | x | x |
| Trunk open | TRUNK | | x | |
| Vehicle security system | THEFT ALM | x | x | x |
| RAP system | RETAINED PWR | | x | |
| Signal buffer system | SIGNAL BUFFER | | x | x |
| TPMS | TPMS (AIR PRESSURE MONITOR) | x | x | x |

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD) AND IGN COUNTER

Freeze Frame Data

The BCM records the following condition at the moment a particular DTC is detected.

- Vehicle Speed
- Odo/Trip Meter

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

- Vehicle Condition (BCM detected condition)

| CONSULT screen terms | Description |
|----------------------|--|
| SLEEP>LOCK | While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK") |
| SLEEP>OFF | While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".) |
| LOCK>ACC | While turning power supply position from "LOCK" to "ACC" |
| ACC>ON | While turning power supply position from "ACC" to "IGN" |
| RUN>ACC | While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.) |
| CRANK>RUN | While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it) |
| RUN>URGENT | While turning power supply position from "RUN" to "ACC" (Emergency stop operation) |
| ACC>OFF | While turning power supply position from "ACC" to "OFF" |
| OFF>LOCK | While turning power supply position from "OFF" to "LOCK" |
| OFF>ACC | While turning power supply position from "OFF" to "ACC" |
| ON>CRANK | While turning power supply position from "IGN" to "CRANKING" |
| OFF>SLEEP | While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode |
| LOCK>SLEEP | While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode |
| LOCK | Power supply position is "LOCK" (Ignition switch OFF with steering is locked.) |
| OFF | Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.) |
| ACC | Power supply position is "ACC" (Ignition switch ACC) |
| ON | Power supply position is "IGN" (Ignition switch ON with engine stopped) |
| ENGINE RUN | Power supply position is "RUN" (Ignition switch ON with engine running) |
| CRANKING | Power supply position is "CRANKING" (At engine cranking) |

IGN Counter

IGN counter indicates the number of times that ignition switch is turned ON after DTC is detected.

- The number is 0 when a malfunction is detected now.
- The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:0000000003842780

Data monitor

| Monitor Item | Description |
|--------------|---|
| REAR DEF SW | This is displayed even when it is not equipped. |
| PUSH SW | Indicates [ON/OFF] condition of push switch. |

ACTIVE TEST

| Test Item | Description |
|---------------|--|
| REAR DEFOGGER | This test is able to check rear window defogger operation. Rear window defogger operates when "ON" on CONSULT-III screen is touched. |

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:0000000003842781

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

| Terminal No. | Signal name | Fuse and fusible link No. |
|--------------|----------------------|---------------------------|
| 1 | | L(40A) |
| 11 | Battery power supply | 10 (10A) |

Is the fuse blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | | |
| M118 | 1 | Ground | Battery voltage |
| M119 | 11 | | |

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| M119 | 13 | | Existed |

Does continuity exist?

YES >> INSPECTION END

NO >> Repair or replace harness.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

REAR WINDOW DEFOGGER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER SWITCH

Description

INFOID:0000000003842782

- The rear window defogger is operated by turning the rear window defogger switch ON.
- The indicator lamp in the rear window defogger illuminates when the rear window defogger is operating.

Component Function Check

INFOID:0000000003842783

1.CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

Check that the indicator lamp of rear window defogger illuminates when rear window defogger switch ON.

Is the inspection result normal?

YES >> Rear window defogger switch function is OK.

NO >> Refer to [DEF-10, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:0000000003842784

1.CHECK MULTIFUNCTION SWITCH (REAR WINDOW DEFOGGER SWITCH)

Does multifunction switch operate normally?

- Without navigation system. Refer to [AV-33, "Diagnosis Description"](#)
- With navigation (single monitor) system. Refer to [AV-317, "Diagnosis Description"](#)
- With navigation (twin monitor) system. Refer to [AV-656, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace multifunction switch (rear window defogger switch). Refer to [AV-1058, "Removal and Installation"](#)

REAR WINDOW DEFOGGER RELAY

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER RELAY

Description

INFOID:0000000003842785

Power is supplied to the rear window defogger using BCM control.

Component Function Check

INFOID:0000000003842786

1.CHECK REAR WINDOW DEFOGGER RELAY POWER SUPPLY CIRCUIT

1. Perform Active Test ("REAR DEFOGGER") using CONSULT-III.
2. Touch "ON".
3. Check that the rear window heating wire is getting warmer.

Is the inspection result normal?

YES >> Rear window defogger relay power supply circuit is OK.

NO >> Refer to [DEF-11, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:0000000003842787

1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10A fuse [No.3, located in fuse block (J/B)].

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK REAR WINDOW DEFOGGER RELAY CIRCUIT 1

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

| (+)BCM | | (-) | Condition | Voltage (V) (Approx.) |
|-----------|----------|--------|----------------------------------|--------------------------|
| Connector | Terminal | | | |
| M123 | 151 | Ground | Rear window defogger switch: ON | 0 |
| | | | Rear window defogger switch: OFF | Battery voltage |

Is the inspection result normal?

YES >> Rear window defogger power supply circuit is OK.

NO >> GO TO 3.

3.CHECK REAR WINDOW DEFOGGER RELAY CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect BCM connector and fuse block (J/B).
3. Check continuity between BCM harness connector and fuse block (J/B) harness connector.

| BCM | | Fuse block (J/B) | | Continuity |
|-----------|----------|------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M123 | 151 | M2 | 4B | Existed |

4. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| M123 | 151 | | Not existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

REAR WINDOW DEFOGGER RELAY

< DTC/CIRCUIT DIAGNOSIS >

4.CHECK REAR WINDOW DEFOGGER RELAY

1. Disconnect rear window defogger relay.
2. Check rear window defogger relay.
Refer to [DEF-12, "Component Inspection"](#)

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace rear window defogger relay.

5.CHECK FUSE BLOCK (J/B)

1. Install the rear window defogger relay.
2. Turn ignition switch ON.
3. Check voltage between fuse block (J/B) connector (fuse block side) and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|------------------|----------|--------|--------------------------|
| Fuse block (J/B) | Terminal | | |
| Connector | M2 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace fuse block (J/B).

6.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-35, "Intermittent Incident"](#)

>> INSPECTION END.

Component Inspection

INFOID:000000003842788

1.CHECK REAR WINDOW DEFOGGER RELAY


1. Turn ignition switch OFF.
2. Disconnect rear window defogger relay.
3. Check rear window defogger relay.

| Rear window defogger relay | Condition | | Continuity |
|----------------------------|-----------|---|-------------|
| Terminal | 3 | 5 | |
| 3 | 5 | 12 V direct current supply between terminals 1 and 2. | Existed |
| | | No current supply | Not existed |

Is the inspection result normal?

YES >> INSPECTION END.

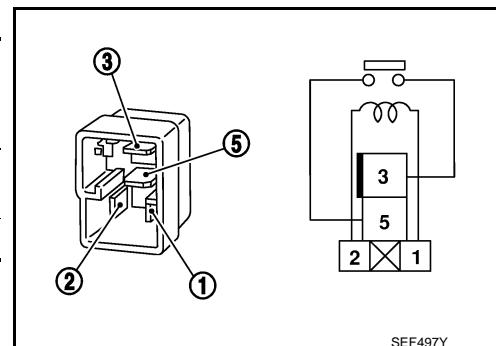NO >> Replace rear window defogger relay.



REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER

Description

INFOID:0000000003842789

Heats the heating wire with the power supply from the rear window defogger relay to prevent the rear window from fogging up.

Component Function Check

INFOID:0000000003842790

1.CHECK REAR WINDOW DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") using CONSULT-III.
2. Touch "ON".
3. Check that the rear window heating wire is getting warmer.

Is the inspection result normal?

- YES >> Rear window defogger is OK.
NO >> Refer to [DEF-13, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:0000000003842791

1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check the following items.
 - 20A fuse [No.14, located in fuse block (J/B)]
 - 20A fuse [No.15, located in fuse block (J/B)]

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between rear window defogger harness connector and ground.

| (+) Rear window defogger | | (-) | Condition | Voltage (V) (Approx.) |
|--------------------------|----------|--------|----------------------------------|--------------------------|
| Connector | Terminal | | | |
| D108 | 1 | Ground | Rear window defogger switch: ON | Battery voltage |
| | | | Rear window defogger switch: OFF | 0 |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear window defogger connector.
3. Check continuity between rear window defogger harness connector and ground.

| Rear window defogger | | Ground | Continuity |
|----------------------|----------|--------|------------|
| Connector | Terminal | | |
| D120 | 2 | | Existed |

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair or replace harness .

4.CHECK REAR WINDOW DEFOGGER CIRCUIT

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect condenser connector.
3. Check continuity between condenser harness connector and rear window defogger harness connector.

| Condenser | | Rear window defogger | | Continuity |
|-----------|----------|----------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| D104 | 2 | D108 | 1 | Existed |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5.CHECK REAR WINDOW DEFOGGER CIRCUIT 2

1. Disconnect fuse block (J/B) connector.
2. Check continuity between fuse block (J/B) harness connector and condenser harness connector.

| Fuse block (J/B) | | Condenser | | Continuity |
|------------------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B6 | 10G | D105 | 1 | Existed |
| | 11G | | | |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK FUSE BLOCK (J/B)

1. Turn ignition switch ON.
2. Check voltage between fuse block (J/B) (fuse block side) and ground.

| (+) Fuse block (J/B) | | (-) | Condition | Voltage (V) (Approx.) |
|----------------------|----------|--------|----------------------------------|--------------------------|
| Connector | Terminal | | | |
| B6 | 10G | Ground | Rear window defogger switch: ON | Battery voltage |
| | | | Rear window defogger switch: OFF | 0 |
| | 11G | | Rear window defogger switch: ON | Battery voltage |
| | | | Rear window defogger switch: OFF | 0 |

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace fuse block (J/B).

7.CHECK CONDENSER

Check condenser. Refer to [DEF-15, "Component Inspection"](#)

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace condenser.

8.CHECK FILAMENT

Check the filament for damage or blown.

Refer to [DEF-68, "Inspection and Repair"](#)

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair filament.

9.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-35, "Intermittent Incident"](#)

REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

>> INSPECTION END

Component Inspection

INFOID:000000003842792

1. CHECK CONDENSER

1. Check continuity between condenser connector and ground part of condenser.

| Condenser | | Ground part of condenser | Continuity |
|-----------|----------|--------------------------|-------------|
| Connector | Terminal | | Continuity |
| D105 | 1 | | Not existed |
| D104 | 2 | | |

2. Check condenser terminals.

| Condenser | | | | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| D105 | 1 | D104 | 2 | Existed |

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair condenser.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

DOOR MIRROR DEFOGGER

Description

INFOID:0000000003842793

Power is supplied to the door mirror defogger using BCM control.

Component Function Check

INFOID:0000000003842794

1.CHECK DOOR MIRROR DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") using CONSULT-III.
2. Touch "ON".
3. Check that both side door mirror glasses are getting warmer.

Is the inspection result normal?

- YES >> Door mirror defogger is OK.
NO >> Refer to [DEF-16, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:0000000003842795

1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10A fuse [No.13, located in fuse block (J/B)].

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK FUSE BLOCK (J/B)

1. Disconnect fuse block (J/B) connector.
2. Turn ignition switch ON.
3. Check voltage between fuse block (J/B) connector (fuse block side) and ground.

| (+) | | (-) | Condition | Voltage (V) (Approx.) |
|------------------|----------|--------|----------------------------------|--------------------------|
| Fuse block (J/B) | Terminal | | | |
| Connector | Terminal | | | |
| M3 | 9C | Ground | Rear window defogger switch: ON | Battery voltage |
| | | | Rear window defogger switch: OFF | 0 |
| | 10C | | Rear window defogger switch: ON | Battery voltage |
| | | | Rear window defogger switch: OFF | 0 |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace fuse block (J/B).

3.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-35, "Intermittent Incident"](#).

>> INSPECTION END

DRIVER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

DRIVER SIDE DOOR MIRROR DEFOGGER

Description

INFOID:0000000003842796

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:0000000003842797

1.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") using CONSULT-III.
2. Touch "ON".
3. Check that the driver side door mirror glass is getting warmer.

Is the inspection result normal?

- YES >> Driver side door mirror defogger is OK.
NO >> Refer to [DEF-17, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:0000000003842798

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door mirror (driver side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (driver side) harness connector and ground.

| (+) Door mirror (driver side) | | (-) Connector | Condition | Voltage (V) (Approx.) |
|-------------------------------|----------|------------------|----------------------------------|--------------------------|
| Connector | Terminal | | | |
| D3 | 7 | Ground | Rear window defogger switch: ON | Battery voltage |
| | | | Rear window defogger switch: OFF | 0 |

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 2.

2.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector.
3. Check continuity between fuse block (J/B) harness connector and door mirror (driver side) harness connector.

| Fuse block (J/B) | | Door mirror (driver side) | | Continuity |
|------------------|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M3 | 10C | D3 | 7 | Existed |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness between fuse block (J/B) and door mirror (driver side).

3.CHECK FUSE BLOCK (J/B) OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between fuse block (J/B) harness connector and ground.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

DRIVER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

| (+) | | (-) | Condition | Voltage (V) (Approx.) |
|------------------|----------|--------|----------------------------------|--------------------------|
| Fuse block (J/B) | Terminal | | | |
| Connector | Terminal | Ground | Rear window defogger switch: ON | Battery voltage |
| M3 | 10C | | Rear window defogger switch: OFF | 0 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuse block (J/B).

4.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between door mirror (driver side) harness connector and ground.

| Door mirror (driver side) | | Ground | Continuity |
|---------------------------|----------|--------|------------|
| Connector | Terminal | | |
| D3 | 19 | | Existed |

Is the inspection result normal?

YES >> Replace door mirror glass (driver side). Refer to [MIR-71, "GLASS MIRROR : Disassembly and Assembly".](#)

NO >> Repair or replace harness between door mirror (driver side) and ground.

5.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-35, "Intermittent Incident"](#)

>> INSPECTION END

PASSENGER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

PASSENGER SIDE DOOR MIRROR DEFOGGER

Description

INFOID:0000000003842799

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:0000000003842800

1.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") using CONSULT-III.
2. Touch "ON".
3. Check that the passenger side door mirror glass is getting warmer.

Is the inspection result normal?

- YES >> Passenger side door mirror defogger is OK.
NO >> Refer to [DEF-19, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:0000000003842801

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door mirror (passenger side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (passenger side) harness connector and ground.

| (+) Door mirror (Passenger side) | | (-) Connector | Condition | Voltage (V) (Approx.) |
|----------------------------------|----------|------------------|----------------------------------|--------------------------|
| Connector | Terminal | | | |
| D33 | 7 | Ground | Rear window defogger switch: ON | Battery voltage |
| | | | Rear window defogger switch: OFF | 0 |

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 2.

2.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector.
3. Check continuity between fuse block (J/B) harness connector and door mirror (passenger side) harness connector.

| Fuse block (J/B) | | Door mirror (passenger side) | | Continuity |
|------------------|----------|------------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M3 | 9C | D33 | 7 | Existed |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness between fuse block (J/B) and door mirror (passenger side).

3.CHECK FUSE BLOCK (J/B) OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between fuse block (J/B) harness connector and ground.

DEF

PASSENGER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

| (+) | | (-) | Condition | Voltage (V) (Approx.) |
|------------------|----------|--------|----------------------------------|--------------------------|
| Fuse block (J/B) | Terminal | | | |
| Connector | Terminal | Ground | Rear window defogger switch: ON | Battery voltage |
| M3 | 9C | | Rear window defogger switch: OFF | 0 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuse block (J/B).

4.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between door mirror (passenger side) harness connector and ground.

| Door mirror (passenger side) | | Ground | Continuity |
|------------------------------|----------|--------|------------|
| Connector | Terminal | | |
| D33 | 19 | | Existed |

Is the inspection result normal?

YES >> Replace door mirror glass (passenger side). Refer to [MIR-71, "GLASS MIRROR : Disassembly and Assembly"](#).

NO >> Repair or replace harness between door mirror (passenger side) and ground.

5.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-35, "Intermittent Incident"](#)

>> INSPECTION END

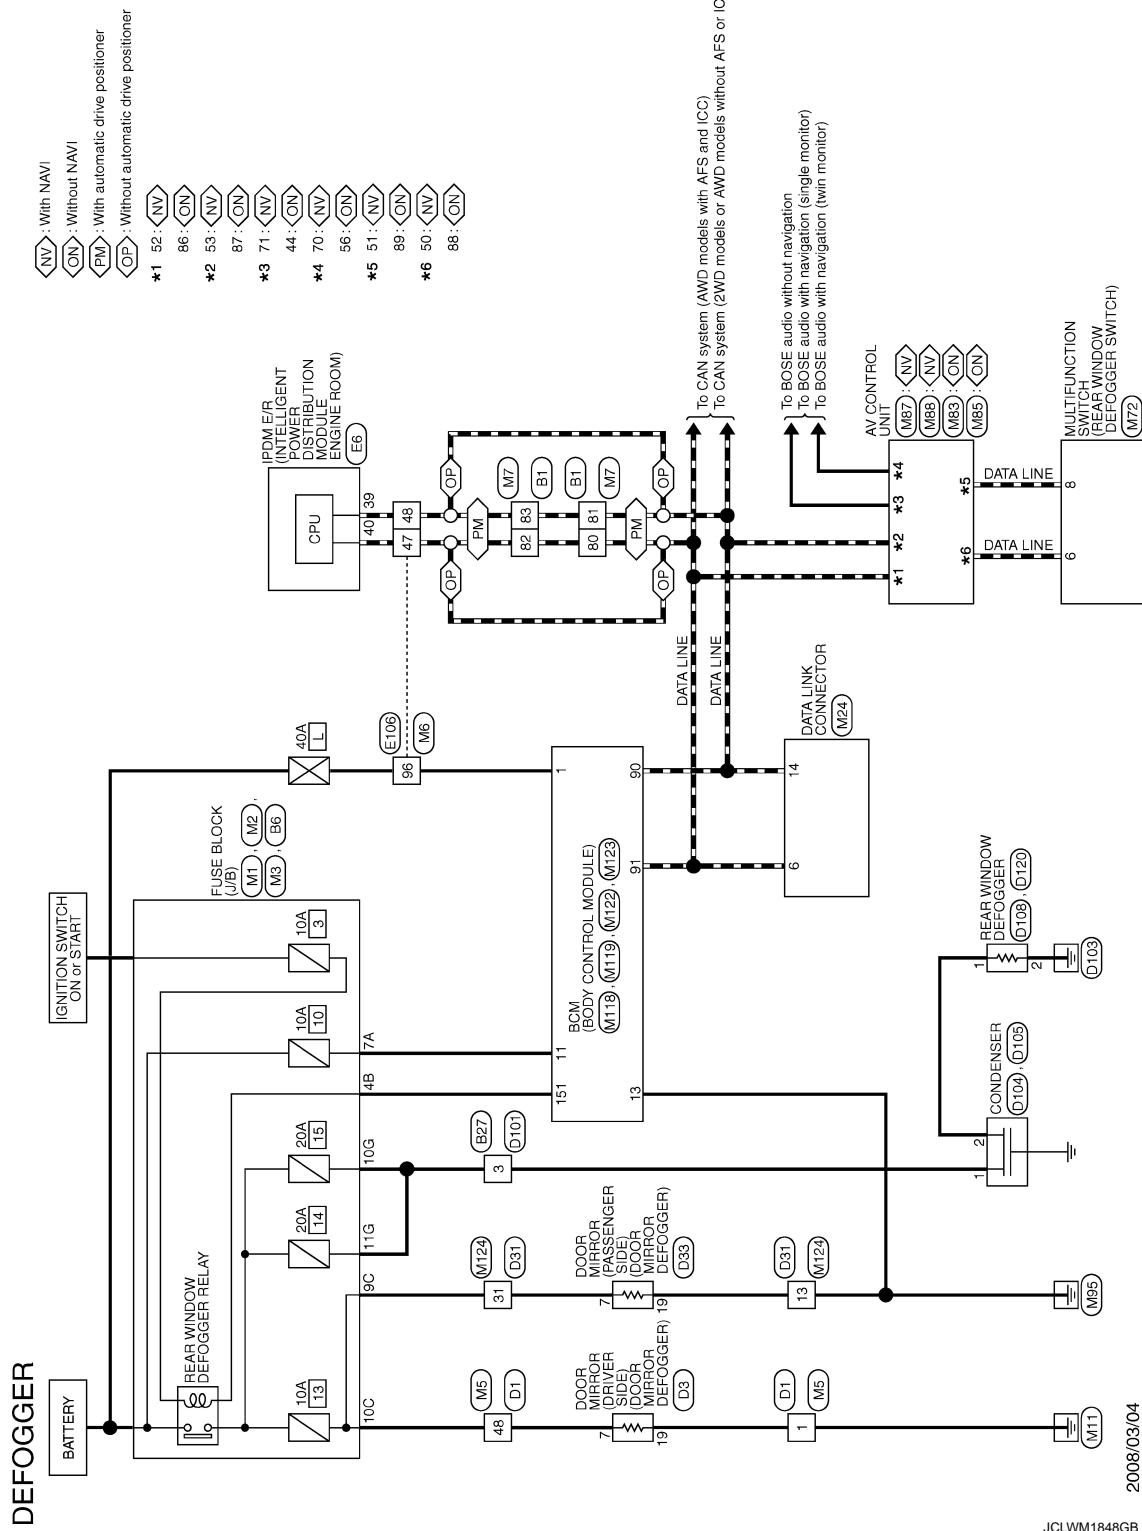
REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER SYSTEM

Wiring Diagram - DEFOGGER SYSTEM -

INFOID:0000000003842802



REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

| DEFROGGER | | D1 | |
|---|---|---|---|
| Connector No. | Connector Name | Connector No. | Connector Name |
| B1 | WIRE TO WIRE | B27 | WIRE TO WIRE |
| Connector Name | WIRE TO WIRE | Connector Name | WIRE TO WIRE |
| Connector Type | TH80FW-CS16-TM4 | Connector Type | TH40FW-CS15 |
|  |  |  |  |
| Connector No. | 66 | Terminal No. | 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 |
| Connector Name | FUSE BLOCK (JU/B) | Color of Wire | GR |
| Connector Type | NS12FBR-CS | Signal Name [Specification] | - |
| | | | |
| Terminal No. | 80 | Terminal No. | 3 |
| Color of Wire | L | Color of Wire | W |
| Signal Name [Specification] | - | Signal Name [Specification] | - |
| Terminal No. | 81 | Terminal No. | 10G |
| Color of Wire | P | Color of Wire | W |
| Signal Name [Specification] | - | Signal Name [Specification] | - |
| Terminal No. | 82 | Terminal No. | 11G |
| Color of Wire | L | Color of Wire | W |
| Signal Name [Specification] | - | Signal Name [Specification] | - |
| Terminal No. | 83 | Terminal No. | 83 |
| Color of Wire | P | Color of Wire | P |
| Signal Name [Specification] | - | Signal Name [Specification] | - |

| D2 | | D27 | |
|---|---|---|---|
| Connector No. | Connector Name | Connector No. | Connector Name |
| B6 | WIRE TO WIRE | B27 | WIRE TO WIRE |
| Connector Name | WIRE TO WIRE | Connector Name | WIRE TO WIRE |
| Connector Type | MOBMW-LC | Connector Type | MOBMW-LC |
|  |  |  |  |
| Terminal No. | 1 | Terminal No. | 1 |
| Color of Wire | GR | Color of Wire | GR |
| Signal Name [Specification] | - | Signal Name [Specification] | - |

| D3 | | D31 | |
|---|---|---|---|
| Connector No. | Connector Name | Connector No. | Connector Name |
| D3 | DOOR MIRROR (DRIVER SIDE) | D31 | DOOR MIRROR (PASSENGER SIDE) |
| Connector Name | DOOR MIRROR (DRIVER SIDE) | Connector Name | DOOR MIRROR (PASSENGER SIDE) |
| Connector Type | TH24MW-NH | Connector Type | TH40FW-NH |
|  |  |  |  |
| Terminal No. | 1 | Terminal No. | 1 |
| Color of Wire | GR | Color of Wire | GR |
| Signal Name [Specification] | - | Signal Name [Specification] | - |

| D4 | | D33 | |
|---|---|---|---|
| Connector No. | Connector Name | Connector No. | Connector Name |
| D4 | DOOR MIRROR (PASSENGER SIDE) | D33 | DOOR MIRROR (PASSENGER SIDE) |
| Connector Name | DOOR MIRROR (PASSENGER SIDE) | Connector Name | DOOR MIRROR (PASSENGER SIDE) |
| Connector Type | TH24MW-NH | Connector Type | TH40FW-NH |
|  |  |  |  |
| Terminal No. | 1 | Terminal No. | 12 11 10 9 8 7 6 5 4 3 2 1 |
| Color of Wire | GR | Color of Wire | GR |
| Signal Name [Specification] | - | Signal Name [Specification] | - |

| D5 | | D101 | |
|---|---|---|---|
| Connector No. | Connector Name | Connector No. | Connector Name |
| D5 | DOOR MIRROR (PASSENGER SIDE) | D101 | DOOR MIRROR (PASSENGER SIDE) |
| Connector Name | DOOR MIRROR (PASSENGER SIDE) | Connector Name | DOOR MIRROR (PASSENGER SIDE) |
| Connector Type | TH24MW-NH | Connector Type | MODFW-LC |
|  |  |  |  |
| Terminal No. | 1 | Terminal No. | 1 |
| Color of Wire | GR | Color of Wire | GR |
| Signal Name [Specification] | - | Signal Name [Specification] | - |



| D6 | | D32 | |
|---|---|---|---|
| Connector No. | Connector Name | Connector No. | Connector Name |
| D6 | DOOR MIRROR (PASSENGER SIDE) | D32 | DOOR MIRROR (PASSENGER SIDE) |
| Connector Name | DOOR MIRROR (PASSENGER SIDE) | Connector Name | DOOR MIRROR (PASSENGER SIDE) |
| Connector Type | TH24MW-NH | Connector Type | TH40FW-NH |
|  |  |  |  |
| Terminal No. | 1 | Terminal No. | 12 11 10 9 8 7 6 5 4 3 2 1 |
| Color of Wire | GR | Color of Wire | GR |
| Signal Name [Specification] | - | Signal Name [Specification] | - |

| D7 | | D34 | |
|---|---|---|---|
| Connector No. | Connector Name | Connector No. | Connector Name |
| D7 | DOOR MIRROR (PASSENGER SIDE) | D34 | DOOR MIRROR (PASSENGER SIDE) |
| Connector Name | DOOR MIRROR (PASSENGER SIDE) | Connector Name | DOOR MIRROR (PASSENGER SIDE) |
| Connector Type | TH24MW-NH | Connector Type | TH40FW-NH |
|  |  |  |  |
| Terminal No. | 1 | Terminal No. | 12 11 10 9 8 7 6 5 4 3 2 1 |
| Color of Wire | GR | Color of Wire | GR |
| Signal Name [Specification] | - | Signal Name [Specification] | - |

JCLWM1849GB

REAR WINDOW DEFOGGER SYSTEM
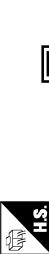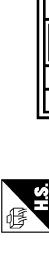
< DTC/CIRCUIT DIAGNOSIS >

| DEFROGGER | | CONDENSER | | REAR WINDOW DEFOGGER | | FUSE BLOCK (J/B) | | FUSE BLOCK (J/B) | |
|---|---|---|---|---|---|---|---|---|---|
| Connector No. | Color of Wire | Terminal No. | Color of Wire | Terminal No. | Color of Wire | Terminal No. | Color of Wire | Terminal No. | Color of Wire |
| D104 | R | 1 | - | DI05 | Y | 2 | B | 2 | B |
| CONDENSER | - | - | - | CONDENSER | - | - | - | - | - |
| Connector Type | P01FB-A | Connector Type | P01FB-A | Connector Type | M02MW-LC | Connector Type | M02MW-LC | Connector Type | NST0FW-CS |
|  |  |  |  |  |  |  |  |  |  |
| Terminal Color Name [Specification] | | Terminal Color Name [Specification] | | Terminal Color Name [Specification] | | Terminal Color Name [Specification] | | Terminal Color Name [Specification] | |
| 1 | R | 2 | Y | 1 | Y | 2 | B | 2 | B |
| Signal Name [Specification] | | Signal Name [Specification] | | Signal Name [Specification] | | Signal Name [Specification] | | Signal Name [Specification] | |
| 1 | - | 2 | - | 1 | - | 2 | - | 2 | - |

JCLWM1850GB

DEF

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

| DEFROGGER | | M3 | | M5 | | M6 | | M7 | |
|----------------|---|-----------------------------|---|----------------|---|-------------------------------------|---|----------------|---|
| Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name |
| Connector Name | FUSE BLOCK (J/B) | Connector Type | TH40MW-CS 15 | Connector Type | TH40MW-CS16-TM4 | Connector Type | TH40MW-CS16-TM4 | Connector Type | TH40MW-CS16-TM4 |
| Connector Type | NS12FW-CS | | | | | | | | |
| |  | |  | |  | |  | |  |
| Terminal No. | Color of Wire | Signal Name [Specification] | | Terminal No. | Color of Wire | Signal Name [Specification] | | Terminal No. | Color of Wire |
| 3C | O | - | | 1 | B | 8 9 10 11 12 13 14 15 | | 80 | L |
| 10G | L | - | | 46 | L | - | | 81 | P |
| | | | | | | | | 82 | L |
| | | | | | | | | 83 | P |
| | | | | | | | | | - |

| M24 | | M72 | | M83 | | M85 | |
|----------------|---|-----------------------------|---|----------------|---|-----------------------------|---|
| Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name |
| Connector Name | DATA LINK CONNECTOR | Connector Type | BD1FW | Connector No. | AV CONTROL UNIT (WITHOUT NAVI) | Connector No. | AV CONTROL UNIT (WITHOUT NAVI) |
| Connector Type | BD1FW | Connector Type | TH4FW-NH | Connector Type | TH4FW-NH | Connector Type | TH32FW-NH |
| |  | |  | |  | |  |
| Terminal No. | Color of Wire | Signal Name [Specification] | | Terminal No. | Color of Wire | Signal Name [Specification] | |
| 6 | L | - | | 4 | L | - | |
| 14 | P | - | | 46 | P | - | |
| | | | | | | | |

| M3 | | M10 | | M11 | | M12 | | M13 | |
|----------------|---|-----------------------------|---|----------------|---|-----------------------------|---|----------------|---|
| Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name |
| Connector Name | DATA LINK CONNECTOR | Connector Type | BD1FW | Connector No. | AV COMM (H) | Connector No. | AV COMM (L) | Connector No. | AV COMM (H) |
| Connector Type | BD1FW | Connector Type | TH4FW-NH | Connector Type | TH4FW-NH | Connector Type | TH4FW-NH | Connector Type | TH4FW-NH |
| |  | |  | |  | |  | |  |
| Terminal No. | Color of Wire | Signal Name [Specification] | | Terminal No. | Color of Wire | Signal Name [Specification] | | Terminal No. | Color of Wire |
| 6 | L | - | | 4 | BR | COMM (DISP->CONT) | | 86 | L |
| 14 | P | - | | 56 | Y | COMM (CONT->DISP) | | 87 | P |
| | | | | | | | | 88 | LG |
| | | | | | | | | 89 | V |

JCLWM1851GB

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

| DEFROGGER | | M07 | | M68 | | AV CONTROL UNIT (WITH NAVI) | | M119 | |
|----------------|----------------|-----------------------------|----------------|----------------|---------------------------|-----------------------------|---------------------------|----------------|---------------------------|
| Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name |
| Connector Type | TH40FW-NH | Connector Type | TH12FW-NH | Connector Type | BCM (BODY CONTROL MODULE) | Connector Type | BCM (BODY CONTROL MODULE) | Connector Type | BCM (BODY CONTROL MODULE) |
| | | | | | | | | | |
| Terminal No. | Color of Wire | Signal Name [Specification] | | Terminal No. | Color of Wire | Signal Name [Specification] | | Terminal No. | Color of Wire |
| 50 | LG | AV COMM (H) | | 70 | BR | COMM (CONT->DISP) | | 11 | R |
| 51 | V | AV COMM (L) | | 71 | Y | COMM (DISP->CONT) | | 13 | B |
| 52 | L | CAN-H | | | | | | | GND |
| 53 | P | CAN-L | | | | | | | |

| M118 | | MODFB-LC | | MODFB-CS | | HS. | | HS. | |
|---------------|----------------|---------------|----------------|---------------|----------------|-----------|-----------|-----------|-----------|
| Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Diagram 1 | Diagram 2 | Diagram 3 | Diagram 4 |
| | | | | | | | | | |

| TH40FW-NH | | TH12FW-NH | | TH40FW-NH | | TH40FW-CS15 | | TH40FW-CS15 | |
|---------------|----------------|---------------|----------------|---------------|----------------|-------------|-----------|-------------|-----------|
| Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name | Diagram 1 | Diagram 2 | Diagram 3 | Diagram 4 |
| | | | | | | | | | |

| M122 | | M123 | | M124 | | M125 | |
|---------------|----------------|---------------|----------------|---------------|----------------|---------------|----------------|
| Connector No. | Connector Name |
| | | | | | | | |

| TH40FW-NH | | TH40FW-CS15 | | TH40FW-CS15 | |
|---------------|----------------|---------------|----------------|---------------|----------------|
| Connector No. | Connector Name | Connector No. | Connector Name | Connector No. | Connector Name |
| | | | | | |

| HS. | | HS. | | HS. | | HS. | |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| Diagram 1 | Diagram 2 | Diagram 3 | Diagram 4 | Diagram 5 | Diagram 6 | Diagram 7 | Diagram 8 |
| | | | | | | | |

JCLWM1852GB

DEF

M

Z

O

P

A B C D T M G I K

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004156263

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

| Monitor Item | Condition | Value/Status |
|----------------|---|----------------------------------|
| FR WIPER HI | Other than front wiper switch HI | Off |
| | Front wiper switch HI | On |
| FR WIPER LOW | Other than front wiper switch LO | Off |
| | Front wiper switch LO | On |
| FR WASHER SW | Front washer switch OFF | Off |
| | Front washer switch ON | On |
| FR WIPER INT | Other than front wiper switch INT | Off |
| | Front wiper switch INT | On |
| FR WIPER STOP | Front wiper is not in STOP position | Off |
| | Front wiper is in STOP position | On |
| INT VOLUME | Wiper intermittent dial is in a dial position 1 - 7 | Wiper intermittent dial position |
| RR WIPER ON | Other than rear wiper switch ON | Off |
| | Rear wiper switch ON | On |
| RR WIPER INT | Other than rear wiper switch INT | Off |
| | Rear wiper switch INT | On |
| RR WASHER SW | Rear washer switch OFF | Off |
| | Rear washer switch ON | On |
| RR WIPER STOP | Rear wiper is in STOP position | Off |
| | Rear wiper is not in STOP position | On |
| TURN SIGNAL R | Other than turn signal switch RH | Off |
| | Turn signal switch RH | On |
| TURN SIGNAL L | Other than turn signal switch LH | Off |
| | Turn signal switch LH | On |
| TAIL LAMP SW | Other than lighting switch 1ST and 2ND | Off |
| | Lighting switch 1ST or 2ND | On |
| HI BEAM SW | Other than lighting switch HI | Off |
| | Lighting switch HI | On |
| HEAD LAMP SW 1 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| HEAD LAMP SW 2 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| PASSING SW | Other than lighting switch PASS | Off |
| | Lighting switch PASS | On |
| AUTO LIGHT SW | Other than lighting switch AUTO | Off |
| | Lighting switch AUTO | On |
| FR FOG SW | Front fog lamp switch OFF | Off |
| | Front fog lamp switch ON | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status |
|----------------|--|--------------|
| RR FOG SW | NOTE: The item is indicated, but not monitored. | Off |
| DOOR SW-DR | Driver door closed | Off |
| | Driver door opened | On |
| DOOR SW-AS | Passenger door closed | Off |
| | Passenger door opened | On |
| DOOR SW-RR | Rear RH door closed | Off |
| | Rear RH door opened | On |
| DOOR SW-RL | Rear LH door closed | Off |
| | Rear LH door opened | On |
| DOOR SW-BK | Back door closed | Off |
| | Back door opened | On |
| CDL LOCK SW | Other than power door lock switch LOCK | Off |
| | Power door lock switch LOCK | On |
| CDL UNLOCK SW | Other than power door lock switch UNLOCK | Off |
| | Power door lock switch UNLOCK | On |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | Off |
| | Driver door key cylinder LOCK position | On |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | Off |
| | Driver door key cylinder UNLOCK position | On |
| KEY CYL SW-TR | NOTE: The item is indicated, but not monitored. | Off |
| HAZARD SW | Hazard switch is OFF | Off |
| | Hazard switch is ON | On |
| REAR DEF SW | NOTE: The item is indicated, but not monitored. | Off |
| TR CANCEL SW | NOTE: The item is indicated, but not monitored. | Off |
| TR/BD OPEN SW | Back door opener switch OFF | Off |
| | While the back door opener switch is turned ON | On |
| TRNK/HAT MNTR | NOTE: The item is indicated, but not monitored. | Off |
| RKE-LOCK | LOCK button of the Intelligent Key is not pressed | Off |
| | LOCK button of the Intelligent Key is pressed | On |
| RKE-UNLOCK | UNLOCK button of the Intelligent Key is not pressed | Off |
| | UNLOCK button of the Intelligent Key is pressed | On |
| RKE-TR/BD | NOTE: The item is indicated, but not monitored. | Off |
| RKE-PANIC | PANIC button of the Intelligent Key is not pressed | Off |
| | PANIC button of the Intelligent Key is pressed | On |
| RKE-P/W OPEN | UNLOCK button of the Intelligent Key is not pressed | Off |
| | UNLOCK button of the Intelligent Key is pressed and held | On |
| RKE-MODE CHG | LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously | Off |
| | LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously | On |
| OPTICAL SENSOR | Bright outside of the vehicle | Close to 5 V |
| | Dark outside of the vehicle | Close to 0 V |

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 DEF
 M
 N
 O
 P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status |
|---------------|--|--------------|
| REQ SW -DR | Driver door request switch is not pressed | Off |
| | Driver door request switch is pressed | On |
| REQ SW -AS | Passenger door request switch is not pressed | Off |
| | Passenger door request switch is pressed | On |
| REQ SW -RR | NOTE: The item is indicated, but not monitored. | Off |
| REQ SW -RL | NOTE: The item is indicated, but not monitored. | Off |
| REQ SW -BD/TR | Back door request switch is not pressed | Off |
| | Back door request switch is pressed | On |
| PUSH SW | Push-button ignition switch (push switch) is not pressed | Off |
| | Push-button ignition switch (push switch) is pressed | On |
| IGN RLY2 -F/B | Ignition switch in OFF or ACC position | Off |
| | Ignition switch in ON position | On |
| CLUCH SW | NOTE: The item is indicated, but not monitored. | Off |
| BRAKE SW 1 | The brake pedal is depressed when No. 7 fuse is blown | Off |
| | The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal | On |
| BRAKE SW 2 | The brake pedal is not depressed | Off |
| | The brake pedal is depressed | On |
| DETE/CANCL SW | Selector lever in P position | Off |
| | Selector lever in any position other than P | On |
| SFT PN/N SW | Selector lever in any position other than P and N | Off |
| | Selector lever in P or N position | On |
| S/L -LOCK | Steering is unlocked | Off |
| | Steering is locked | On |
| S/L -UNLOCK | Steering is locked | Off |
| | Steering is unlocked | On |
| S/L RELAY-F/B | Ignition switch in OFF or ACC position | Off |
| | Ignition switch in ON position | On |
| UNLK SEN -DR | Driver door is unlocked | Off |
| | Driver door is locked | On |
| PUSH SW -IPDM | Push-button ignition switch (push-switch) is not pressed | Off |
| | Push-button ignition switch (push-switch) is pressed | On |
| IGN RLY1 -F/B | Ignition switch in OFF or ACC position | Off |
| | Ignition switch in ON position | On |
| DETE SW -IPDM | Selector lever in any position other than P | Off |
| | Selector lever in P position | On |
| SFT PN -IPDM | Selector lever in any position other than P and N | Off |
| | Selector lever in P or N position | On |
| SFT P -MET | Selector lever in any position other than P | Off |
| | Selector lever in P position | On |
| SFT N -MET | Selector lever in any position other than N | Off |
| | Selector lever in N position | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status |
|----------------|---|--|
| ENGINE STATE | Engine stopped | Stop |
| | While the engine stalls | Stall |
| | At engine cranking | Crank |
| | Engine running | Run |
| S/L LOCK-IPDM | Steering is unlocked | Off |
| | Steering is locked | On |
| S/L UNLK-IPDM | Steering is locked | Off |
| | Steering is unlocked | On |
| S/L RELAY-REQ | Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK | Off |
| | Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK | On |
| VEH SPEED 1 | While driving | Equivalent to speedometer reading |
| VEH SPEED 2 | While driving | Equivalent to speedometer reading |
| DOOR STAT-DR | Driver door is locked | LOCK |
| | Wait with selective UNLOCK operation (5 seconds) | READY |
| | Driver door is unlocked | UNLOCK |
| DOOR STAT-AS | Passenger door is locked | LOCK |
| | Wait with selective UNLOCK operation (5 seconds) | READY |
| | Passenger door is unlocked | UNLOCK |
| ID OK FLAG | Steering is locked | Reset |
| | Steering is unlocked | Set |
| PRMT ENG STRT | The engine start is prohibited | Reset |
| | The engine start is permitted | Set |
| PRMT RKE STRT | NOTE: The item is indicated, but not monitored. | Reset |
| KEY SW -SLOT | The Intelligent Key is not inserted into key slot | Off |
| | The Intelligent Key is inserted into key slot | On |
| RKE OPE COUN1 | During the operation of the Intelligent Key | Operation frequency of the Intelligent Key |
| RKE OPE COUN2 | NOTE: The item is indicated, but not monitored. | — |
| CONFIRM ID ALL | The key ID that the key slot receives is not recognized by any key ID registered to BCM. | Yet |
| | The key ID that the key slot receives accords with any key ID registered to BCM. | Done |
| CONFIRM ID4 | The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the fourth key ID registered to BCM. | Done |
| CONFIRM ID3 | The key ID that the key slot receives is not recognized by the third key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the third key ID registered to BCM. | Done |
| CONFIRM ID2 | The key ID that the key slot receives is not recognized by the second key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the second key ID registered to BCM. | Done |

A
B
C
D
E
F
G
H
I
J
K
DEF

M
N
O
P

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status |
|--------------|--|--------------|
| CONFIRM ID1 | The key ID that the key slot receives is not recognized by the first key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the first key ID registered to BCM. | Done |
| TP 4 | The ID of fourth Intelligent Key is not registered to BCM | Yet |
| | The ID of fourth Intelligent Key is registered to BCM | Done |
| TP 3 | The ID of third Intelligent Key is not registered to BCM | Yet |
| | The ID of third Intelligent Key is registered to BCM | Done |
| TP 2 | The ID of second Intelligent Key is not registered to BCM | Yet |
| | The ID of second Intelligent Key is registered to BCM | Done |
| TP 1 | The ID of first Intelligent Key is not registered to BCM | Yet |
| | The ID of first Intelligent Key is registered to BCM | Done |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

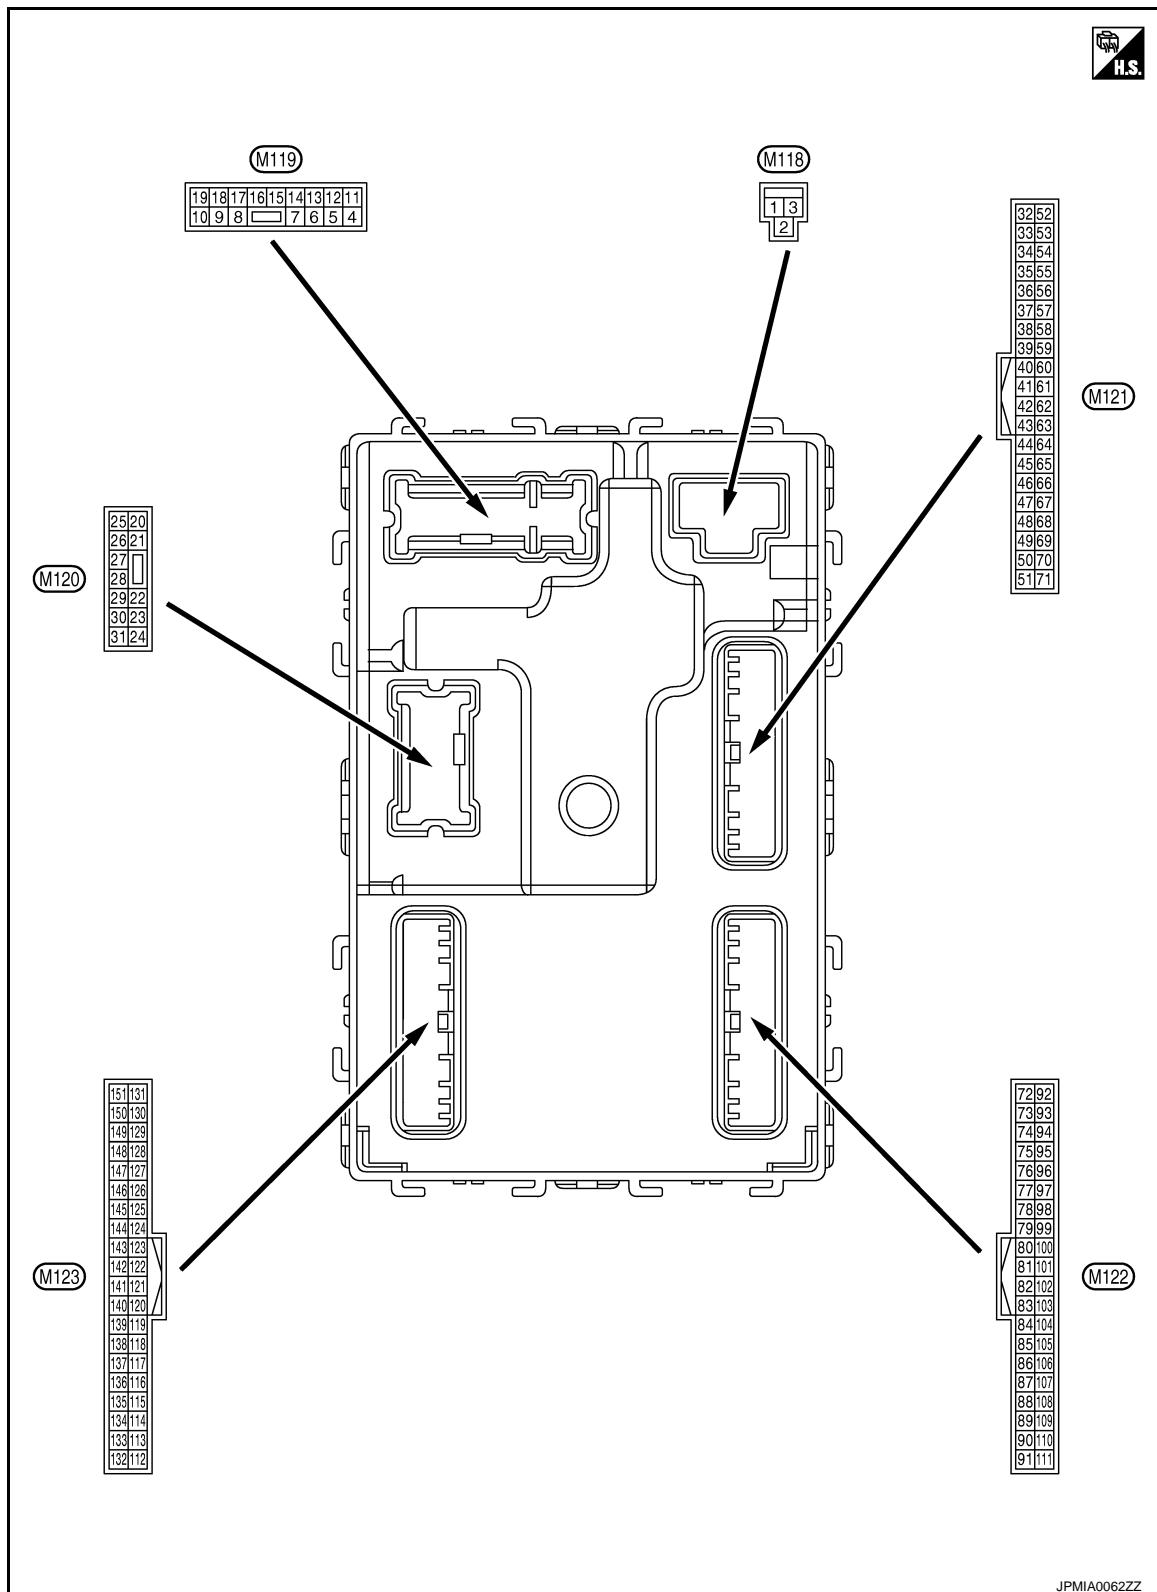TERMINAL LAYOUT




PHYSICAL VALUES

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|---|--|
| + | - | Signal name | Input/ Output | | |
| 1 (W) | Ground | Battery power supply | Input | Ignition switch OFF | Battery voltage |
| 2 (Y) | Ground | P/W power supply (BAT) | Output | Ignition switch OFF | 12 V |
| 3 (O) | Ground | P/W power supply (RAP) | Output | Ignition switch ON | 12 V |
| 4 (P) | Ground | Interior room lamp power supply (Battery saver signal) | Output | Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply) | 0 V |
| | | | | Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply) | 12 V |
| 5 (V) | Ground | Passenger door UN- LOCK | Output | Passenger door | UNLOCK (Actuator is activated) |
| | | | | | Other than UNLOCK (Actuator is not activated) |
| 7 (Y) | Ground | Step lamp | Output | Step lamp | ON |
| | | | | | OFF |
| 8 (V) | Ground | All doors, fuel lid LOCK | Output | All doors, fuel lid | LOCK (Actuator is activated) |
| | | | | | Other than LOCK (Actuator is not activated) |
| 9 (G) | Ground | Driver door, fuel lid UNLOCK | Output | Driver door, fuel lid | UNLOCK (Actuator is activated) |
| | | | | | Other than UNLOCK (Actuator is not activated) |
| 10 (BR) | Ground | Rear RH door and rear LH door UN- LOCK | Output | Rear RH door and rear LH door | UNLOCK (Actuator is activated) |
| | | | | | Other than UNLOCK (Actuator is not activated) |
| 11 (R) | Ground | Battery power supply | Input | Ignition switch OFF | Battery voltage |
| 13 (B) | Ground | Ground | — | Ignition switch ON | 0 V |
| 15 (Y) | Ground | ACC indicator lamp | Output | Ignition switch | OFF (LOCK indicator is not illuminated) |
| | | | | | ACC or ON |
| 17 (W) | Ground | Turn signal RH (Front) | Output | Ignition switch ON | Turn signal switch OFF |
| | | | | | Turn signal switch RH |




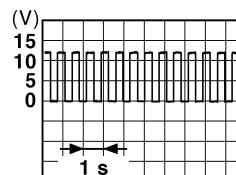


PKID0926E

6.5 V




BCM (BODY CONTROL MODULE)
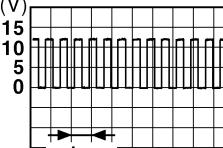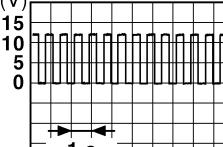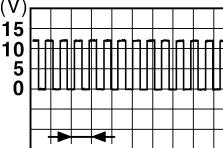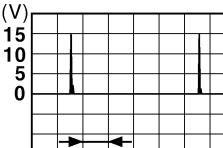
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---------------------------|------------------|---|---|---|
| + | - | Signal name | Input/ Output | | | |
| 18 (O) | Ground | Turn signal LH (Front) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | | Turn signal switch LH |  PKID0926E 6.5 V |
| 19 (SB) | Ground | Room lamp timer | Output | Other than under condition | | 5.0 V |
| | | | | <ul style="list-style-type: none"> Interior room lamp timer is activated. (Door is unlocked, etc...) Welcome light function is activated. | | 0 V |
| 20 (V) | Ground | Turn signal RH (Rear) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | | Turn signal switch RH |  PKID0926E 6.5 V |
| 25 (G) | Ground | Turn signal LH (Rear) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | | Turn signal switch LH |  PKID0926E 6.5 V |
| 26 (G) | Ground | Rear wiper | Output | Rear wiper | OFF (Stopped) | 0 V |
| | | | | | ON (Operated) | 12 V |
| 34 (SB) | Ground | Luggage room antenna (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compartment |  JMKIA0062GB |
| | | | | | When Intelligent Key is not in the passenger compartment |  JMKIA0063GB |





BCM (BODY CONTROL MODULE)
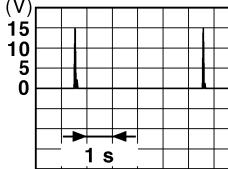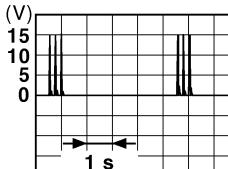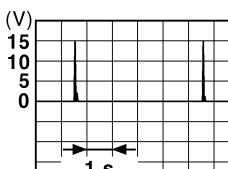
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|-----------------------------------|---|--|
| | Signal name | Input/ Output | | |
| + | - | | | |
| 35 (V) | Ground | Luggage room antenna (+) | Output Ignition switch OFF | When Intelligent Key is in the passenger compartment |
| | | | |  JMKA0062GB |
| 38 (B) | Ground | Back door antenna (-) | Output When the back door opener request switch is operated with ignition switch OFF | When Intelligent Key is not in the passenger compartment |
| | | | |  JMKA0063GB |
| 39 (W) | Ground | Back door antenna (+) | Output When the back door opener request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area |
| | | | |  JMKA0062GB |
| 47 (Y) | Ground | Ignition relay (IPDM E/R) control | Output Ignition switch | OFF or ACC |
| | | | | 12 V |
| | | | | ON |
| | | | | 0 V |

BCM (BODY CONTROL MODULE)
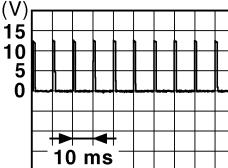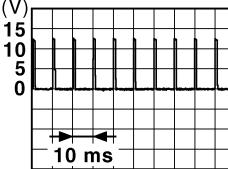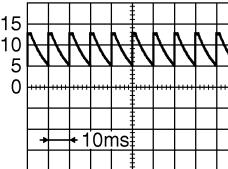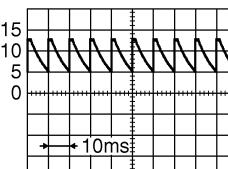
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--|------------------|--|---|--|
| + | - | Signal name | Input/ Output | | | |
| 48 (W) | Ground | Back door opener switch operation | Output | Back door opener switch | Not pressed | 12 V |
| | | | | | Pressed | 0 V |
| 52 (LG) | Ground | Starter relay control | Output | Ignition switch ON | When selector lever is in P or N position | 12 V |
| | | | | | When selector lever is not in P or N position | 0 V |
| 61 (W) | Ground | Back door opener request switch | Input | Back door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  <small>JPMIA0016GB</small> 1.0 V |
| 64 (L) | Ground | Intelligent Key warning buzzer (Engine room) | Output | Intelligent Key warning buzzer (Engine room) | Sounding | 0 V |
| | | | | | Not sounding | 12 V |
| 65 (O) | Ground | Rear wiper stop position | Input | Rear wiper | In stop position |  <small>JPMIA0016GB</small> 1.0 V |
| | | | | | Not in stop position | 0 V |
| 66 (LG) | Ground | Back door switch | Input | Back door switch | OFF (Door close) | 12 V |
| | | | | | ON (Door open) | 0 V |
| 67 (P) | Ground | Back door opener switch | Input | Back door opener switch | Pressed | 0 V |
| | | | | | Not pressed |  <small>JPMIA0594GB</small> 8.5 - 9.0 V |
| 68 (BR) | Ground | Rear RH door switch | Input | Rear RH door switch | OFF (Door close) |  <small>JPMIA0594GB</small> 8.5 - 9.0 V |
| | | | | | ON (Door open) | 0 V |

A

B

C

D

E

F

G

H

I

J

K

DEF

M

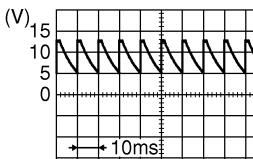
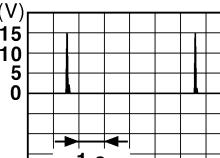
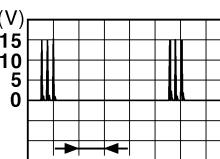
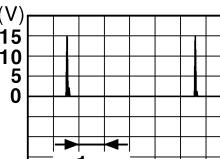
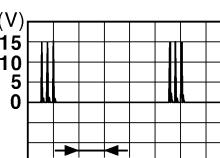
N

O

P







BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|--|-----------|---|
| | Signal name | Input/ Output | | |
| + | - | | | |
| 69 (R) | Ground | Rear LH door switch | Input | <p>Rear LH door switch</p> <p>OFF (Door close)</p>  <p>JMKIA0594GB</p> |
| | | | | <p>ON (Door open)</p> <p>0 V</p> |
| 72 (R) | Ground | Room antenna 2 (-) (Center console) | Output | <p>Ignition switch OFF</p> <p>When Intelligent Key is in the passenger compartment</p>  <p>JMKIA0062GB</p> |
| | | | | <p>When Intelligent Key is not in the passenger compartment</p>  <p>JMKIA0063GB</p> |
| 73 (G) | Ground | Room antenna 2 (+) (Center console) | Output | <p>Ignition switch OFF</p> <p>When Intelligent Key is in the passenger compartment</p>  <p>JMKIA0062GB</p> |
| | | | | <p>When Intelligent Key is not in the passenger compartment</p>  <p>JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)
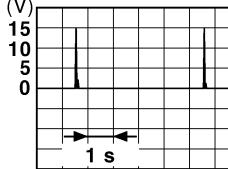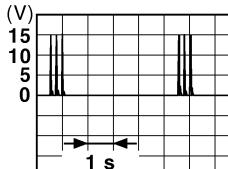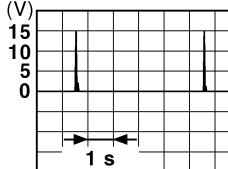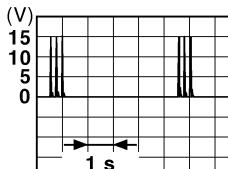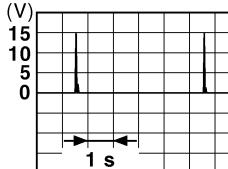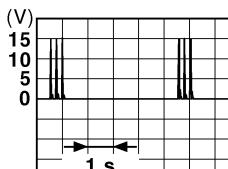
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) | |
|------------------------------|-------------|----------------------------|-------------|---|---|
| | + | - | Signal name | Input/ Output | |
| 74 (SB) | Ground | Passenger door antenna (-) | Output | When Intelligent Key is in the antenna detection area |  (V) 15 10 5 0 1 s <small>JMKIA0062GB</small> |
| | | | | When the passenger door request switch is operated with ignition switch OFF |  (V) 15 10 5 0 1 s <small>JMKIA0063GB</small> |
| 75 (BR) | Ground | Passenger door antenna (+) | Output | When Intelligent Key is in the antenna detection area |  (V) 15 10 5 0 1 s <small>JMKIA0062GB</small> |
| | | | | When the passenger door request switch is operated with ignition switch OFF |  (V) 15 10 5 0 1 s <small>JMKIA0063GB</small> |
| 76 (V) | Ground | Driver door antenna (-) | Output | When Intelligent Key is in the antenna detection area |  (V) 15 10 5 0 1 s <small>JMKIA0062GB</small> |
| | | | | When the driver door request switch is operated with ignition switch OFF |  (V) 15 10 5 0 1 s <small>JMKIA0063GB</small> |

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N


O

P


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|--|-----------|--|
| | Signal name | Input/ Output | | |
| + | - | | | |
| 77 (LG) | Ground | Driver door antenna (+) | Output | When Intelligent Key is in the antenna detection area |
| | | | | When the driver door request switch is oper- ated with ignition switch OFF |
| 78 (Y) | Ground | Room antenna 1 (-) (Instrument panel) | Output | When Intelligent Key is not in the antenna detection area |
| | | | | When Intelligent Key is in the passenger compart- ment |
| 79 (BR) | Ground | Room antenna 1 (+) (Instrument panel) | Output | When Intelligent Key is not in the passenger compart- ment |
| | | | | When Intelligent Key is in the passenger compart- ment |

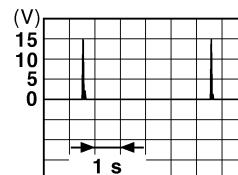


JMKIA0062GB

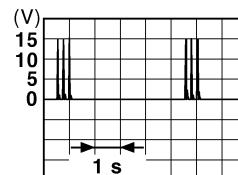


JMKIA0063GB

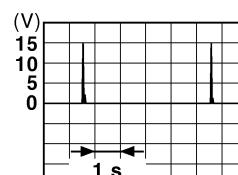


JMKIA0062GB

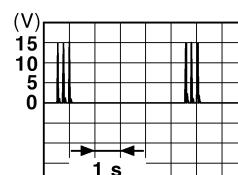

JMKIA0063GB

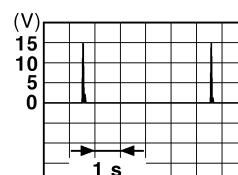

JMKIA0062GB

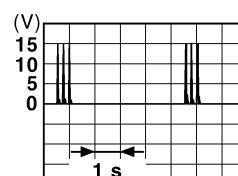

JMKIA0063GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|---|------------------|--|
| | + | - | | |
| 80 (GR) | Ground | NATS antenna amp. | Input/ Output | During waiting Ignition switch is pressed while inserting the Intelligent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move. |
| 81 (W) | Ground | NATS antenna amp. | Input/ Output | During waiting Ignition switch is pressed while inserting the Intelligent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move. |
| 82 (P) | Ground | Ignition relay [Fuse block (J/B)] control | Output | OFF or ACC ON |
| | | | | (V) 15 10 5 0 1 ms JKMKIA0064GB |
| 83 (GR) | Ground | Remote keyless entry receiver communication | Input/ Output | During waiting |
| | | | | (V) 15 10 5 0 1 ms JKMKIA0065GB |

A

B

C

D

E

F

G

H

I

J

K

DEF

M

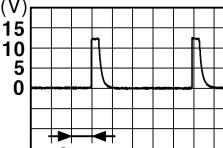
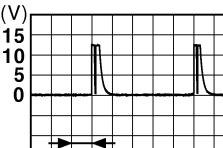
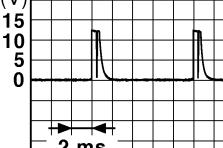
N

O

P






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|-------------------------------|-----------|---|
| | Signal name | Input/ Output | | |
| + | - | | | |
| 87 (BR) | Ground | Combination switch INPUT 5 | Input |  All switches OFF (Wiper intermittent dial 4)  Front fog lamp switch ON (Wiper intermittent dial 4)  Rear wiper switch ON (Wiper intermittent dial 4) Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 |
| | | | | JPMIA0041GB 1.4 V |
| | | | | JPMIA0037GB 1.3 V |
| | | | | JPMIA0039GB 1.3 V |
| | | | | JPMIA0040GB 1.3 V |




BCM (BODY CONTROL MODULE)
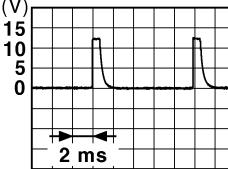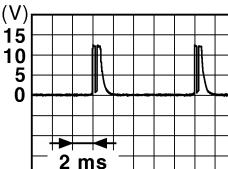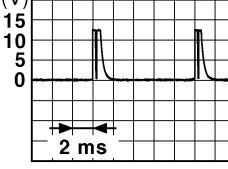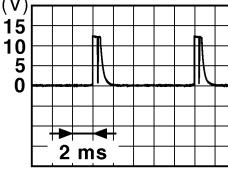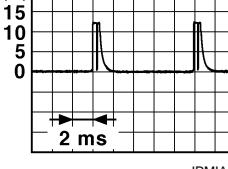
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) | A B C D E F G H I J K DEF M N O P |
|------------------------------|-------------|--|------------------|--|---|
| | Signal name | Input/ Output | | | |
| 88 (V) | Ground | Combination switch INPUT 3 | Input | All switches OFF (Wiper intermittent dial 4) Lighting switch HI (Wiper intermittent dial 4) Lighting switch 2ND (Wiper intermittent dial 4) Rear washer switch ON (Wiper intermittent dial 4) |  JPMIA0041GB 1.4 V |
| | | | | |  JPMIA0036GB 1.3 V |
| | | | | |  JPMIA0037GB 1.3 V |
| | | | | |  JPMIA0039GB 1.3 V |
| | | | | |  JPMIA0040GB 1.3 V |
| 89 (SB) | Ground | Push-button ignition switch (Push switch) | Input | Push-button igni- tion switch (Push switch) | 0 V |
| | | | | | 12 V |
| 90 (P) | Ground | CAN-L | Input/ Output | — | — |
| 91 (L) | Ground | CAN-H | Input/ Output | — | — |





BCM (BODY CONTROL MODULE)
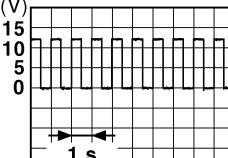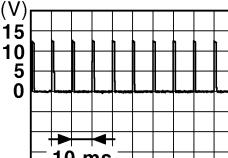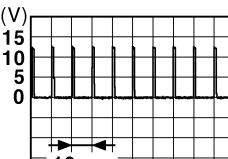
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--|------------------|-------------------------------|---|--|
| + | - | Signal name | Input/ Output | | | |
| 92 (LG) | Ground | Key slot illumination | Output | Key slot illumination | OFF | 12 V |
| | | | | | Blinking |  JPMIA0015GB |
| | | | | | ON | 6.5 V |
| 93 (V) | Ground | ON indicator lamp | Output | Ignition switch | OFF (LOCK indicator is not illuminated) | Battery voltage |
| | | | | | ON or ACC | 0 V |
| 95 (O) | Ground | ACC relay control | Output | Ignition switch | OFF | 0 V |
| | | | | | ACC or ON | 12 V |
| 96 (GR) | Ground | A/T shift selector (Detention switch) power supply | Output | — | | 12 V |
| 97 (L) | Ground | Steering lock condition No. 1 | Input | Steering lock | LOCK status | 0 V |
| | | | | | UNLOCK status | 12 V |
| 98 (P) | Ground | Steering lock condition No. 2 | Input | Steering lock | LOCK status | 12 V |
| | | | | | UNLOCK status | 0 V |
| 99 (R) | Ground | Selector lever P position switch | Input | Selector lever | P position | 0 V |
| | | | | | Any position other than P | 12 V |
| 100 (G) | Ground | Passenger door request switch | Input | Passenger door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  JPMIA0016GB |
| | | | | | | 1.0 V |
| 101 (SB) | Ground | Driver door request switch | Input | Driver door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  JPMIA0016GB |
| | | | | | | 1.0 V |
| 102 (O) | Ground | Blower fan motor relay control | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | 12 V |
| 103 (BR) | Ground | Remote keyless entry receiver power supply | Output | Ignition switch OFF | | 12 V |

BCM (BODY CONTROL MODULE)


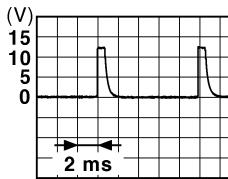
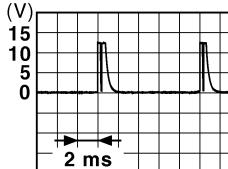
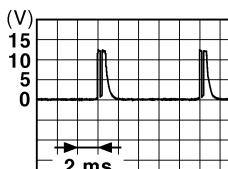
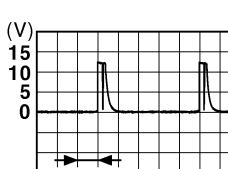
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) | |
|------------------------------|-------------|---------------------------------|-----------|--|--|
| | + | - | | | |
| 106 (W) | Ground | Steering lock unit power supply | Output | Ignition switch | OFF or ACC 12 V |
| | | | | ON | 0 V |
| | | | | All switches OFF |  <small>JPMIA0041GB</small> 1.4 V |
| | | | | Turn signal switch LH |  <small>JPMIA0037GB</small> 1.3 V |
| 107 (LG) | Ground | Combination switch INPUT 1 | Input | Combination switch (Wiper intermittent dial 4) |  <small>JPMIA0036GB</small> 1.3 V |
| | | | | Turn signal switch RH |  <small>JPMIA0038GB</small> 1.3 V |
| | | | | Front wiper switch LO |  <small>JPMIA0039GB</small> 1.3 V |
| | | | | Front washer switch ON |  <small>JPMIA0039GB</small> 1.3 V |

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P







BCM (BODY CONTROL MODULE)
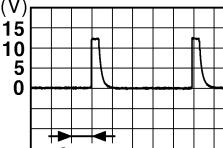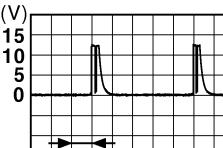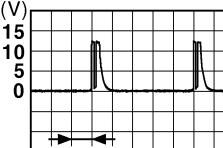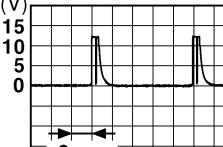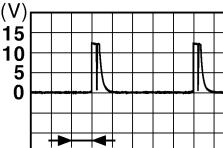
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|-------------------------------|-----------|---|
| | Signal name | Input/ Output | | |
| + | - | | | |
| 108 (R) | Ground | Combination switch INPUT 4 | Input |  All switches OFF (Wiper intermittent dial 4)  Lighting switch AUTO (Wiper intermittent dial 4)  Lighting switch 1ST (Wiper intermittent dial 4)  Rear wiper switch INT (Wiper intermittent dial 4)  Any of the conditions below with all switches OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 |
| | | | | JPMIA0041GB 1.4 V |
| | | | | JPMIA0038GB 1.3 V |
| | | | | JPMIA0036GB 1.3 V |
| | | | | JPMIA0040GB 1.3 V |

BCM (BODY CONTROL MODULE)

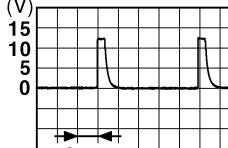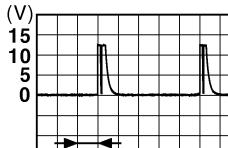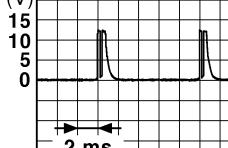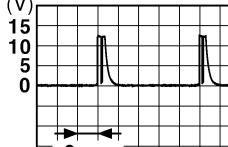
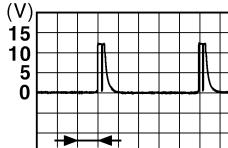
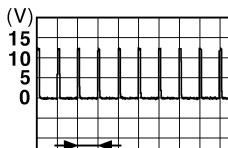
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) | | |
|------------------------------|-------------|-------------------------------|-------------|--|------------------------|--|
| | + | - | Signal name | Input/ Output | | |
| 109 (Y) | Ground | Combination switch INPUT 2 | Input | Combination switch (Wiper intermittent dial 4) | All switches OFF |  <small>JPMIA0041GB</small> 1.4 V |
| | | | | | Lighting switch PASS |  <small>JPMIA0037GB</small> 1.3 V |
| | | | | | Lighting switch 2ND |  <small>JPMIA0036GB</small> 1.3 V |
| | | | | | Front wiper switch INT |  <small>JPMIA0038GB</small> 1.3 V |
| | | | | | Front wiper switch HI |  <small>JPMIA0040GB</small> 1.3 V |
| 110 (G) | Ground | Hazard switch | Input | Hazard switch | ON | 0 V |
| | | | | | OFF |  <small>JPMIA0012GB</small> 1.1 V |

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 DEF
 M
 N
 O
 P





BCM (BODY CONTROL MODULE)
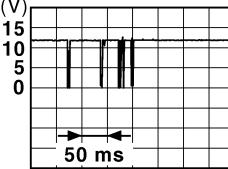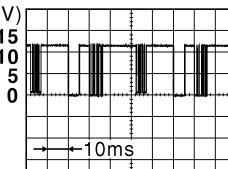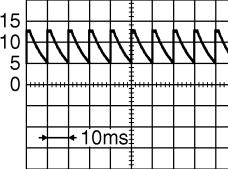
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) | |
|------------------------------|-------------|---|------------------|--|--|
| | Signal name | Input/ Output | | | |
| + | - | | | | |
| 111 (GR) | Ground | Steering lock unit communication | Input/ Output | LOCK status | |
| | | | | LOCK or UNLOCK | |
| | | | | Steering lock | |
| | | | |  (V) 15 10 5 0 50 ms | |
| 112 (GR) | Ground | Rain sensor serial link | Input/ Output | For 15 seconds after UN-LOCK | |
| | | | | 12 V | |
| | | | | 15 seconds or later after UNLOCK | |
| 113 (P) | Ground | Optical sensor | Input | Ignition switch ON | |
| | | | |  (V) 15 10 5 0 10ms | |
| | | | | 8.7 V | |
| 116 (BR) | Ground | Stop lamp switch 1 | Input | — | |
| | | | | Battery voltage | |
| 118 (P) | Ground | Stop lamp switch 2 (Without ICC) | Input | OFF (Brake pedal is not depressed) | |
| | | | | 0 V | |
| | | Stop lamp switch 2 (With ICC) | | ON (Brake pedal is depressed) | |
| | | | | Battery voltage | |
| 119 (SB) | Ground | Front door lock assembly driver side (Unlock sensor) | Input | Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF | |
| | | | | 0 V | |
| | | | | Stop lamp switch ON (Brake pedal is depressed) or ICC brake hold relay ON | |
| | | | | Battery voltage | |
| 121 (BR) | Ground | Key slot switch | Input | LOCK status (Unlock sensor switch OFF) | |
| | | | |  (V) 15 10 5 0 10ms | |
| 122 (V) | Ground | ACC feedback | Input | UNLOCK status (Unlock switch sensor ON) | |
| | | | | 0 V | |
| 121 (BR) | Ground | Key slot switch | Input | When the Intelligent Key is inserted into key slot | |
| | | | | 12 V | |
| 122 (V) | Ground | ACC feedback | Input | When the Intelligent Key is not inserted into key slot | |
| | | | | 0 V | |
| 121 (BR) | Ground | Key slot switch | Input | OFF | |
| | | | | 0 V | |
| 122 (V) | Ground | ACC feedback | Input | ACC or ON | |
| | | | | Battery voltage | |

BCM (BODY CONTROL MODULE)

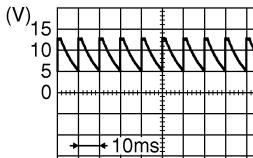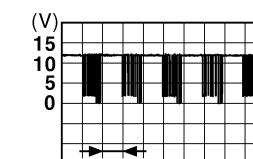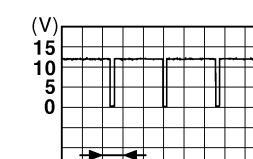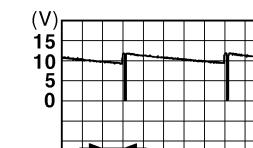
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) | A B C D E F G H I J K DEF M N O P |
|------------------------------|--------|-----------------------------------|------------------|--|--------------------------|--|--|
| + | - | Signal name | Input/ Output | | | | |
| 123 (W) | Ground | IGN feedback | Input | Ignition switch | OFF or ACC | 0 V | A B |
| | | | | | ON | Battery voltage | C D E |
| 124 (LG) | Ground | Passenger door switch | Input | Passenger door switch | OFF (Door close) | (V)  JPMIA0594GB 8.5 - 9.0 V | F G H |
| | | | | | ON (Door opene) | 0 V | I J K |
| 132 (O) | Ground | Power window switch communication | Input/ Output | Ignition switch ON | | (V)  JPMIA0013GB 10.2 V | DEF |
| | | | | Ignition switch OFF or ACC | 12 V | | |
| 134 (GR) | Ground | LOCK indicator lamp | Output | LOCK indicator lamp | OFF | Battery voltage | I |
| | | | | | ON | 0 V | J |
| 137 (B) | Ground | Receiver and sensor ground | Input | Ignition switch ON | | 0 V | K |
| | | | | | | | M N O P |
| 138 (Y) | Ground | Sensor power supply | Output | Ignition switch | OFF | 0 V | |
| | | | | | ACC or ON | 5.0 V | |
| 140 (R) | Ground | Selector lever P/N position | Input | Selector lever | P or N position | 12 V | |
| | | | | | Except P and N positions | 0 V | |
| 141 (G) | Ground | Security indicator | Output | Security indicator | ON | 0 V | |
| | | | | | Blinking | (V)  JPMIA0014GB 11.3 V | DEF |
| | | | | | OFF | 12 V | |
| 142 (O) | Ground | Combination switch OUTPUT 5 | Output | Combination switch (Wiper intermittent dial 4) | All switches OFF | 0 V | |
| | | | | | Lighting switch 1ST | (V)  JPMIA0031GB 10.7 V | P |
| | | | | | Lighting switch HI | | |
| | | | | | Lighting switch 2ND | | |
| | | | | | Turn signal switch RH | | |


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|--------------------------------|-----------|--|
| | Signal name | Input/ Output | | |
| + | - | | | |
| 143 (P) | Ground | Combination switch OUTPUT 1 | Output | All switches OFF (Wiper intermittent dial 4) Front wiper switch HI (Wiper intermittent dial 4) Rear wiper switch INT (Wiper intermittent dial 4) Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| 144 (G) | Ground | Combination switch OUTPUT 2 | Output | All switches OFF (Wiper intermittent dial 4) Front washer switch ON (Wiper intermittent dial 4) Rear wiper switch ON (Wiper intermittent dial 4) Rear washer switch ON (Wiper intermittent dial 4) Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| 145 (L) | Ground | Combination switch OUTPUT 3 | Output | All switches OFF Front wiper switch INT Front wiper switch LO Lighting switch AUTO |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| 146 (SB) | Ground | Combination switch OUTPUT 4 | Output | All switches OFF Front fog lamp switch ON Lighting switch 2ND Lighting switch PASS Turn signal switch LH |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

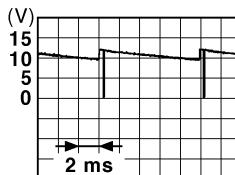


JPMIA0032GB

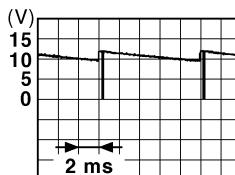

JPMIA0033GB

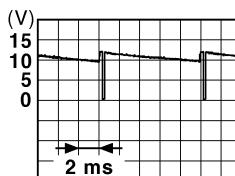

JPMIA0034GB

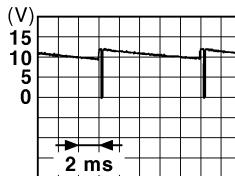


JPMIA0035GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | Description | | Condition | Value (Approx.) |
|------------------------------|-------------|------------------------------------|-----------|----------------------|
| | + | - | | |
| 150 (GR) | Ground | Driver door switch | Input | Driver door switch |
| | | | | OFF (Door close) |
| 151 (G) | Ground | Rear window defogger relay control | Output | Rear window defogger |
| | | | | Active |
| | | | | Not activated |

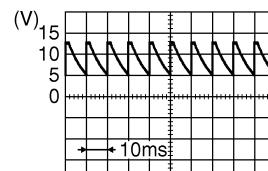

JPMIA0594GB

8.5 - 9.0 V

0 V

0 V

Battery voltage

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

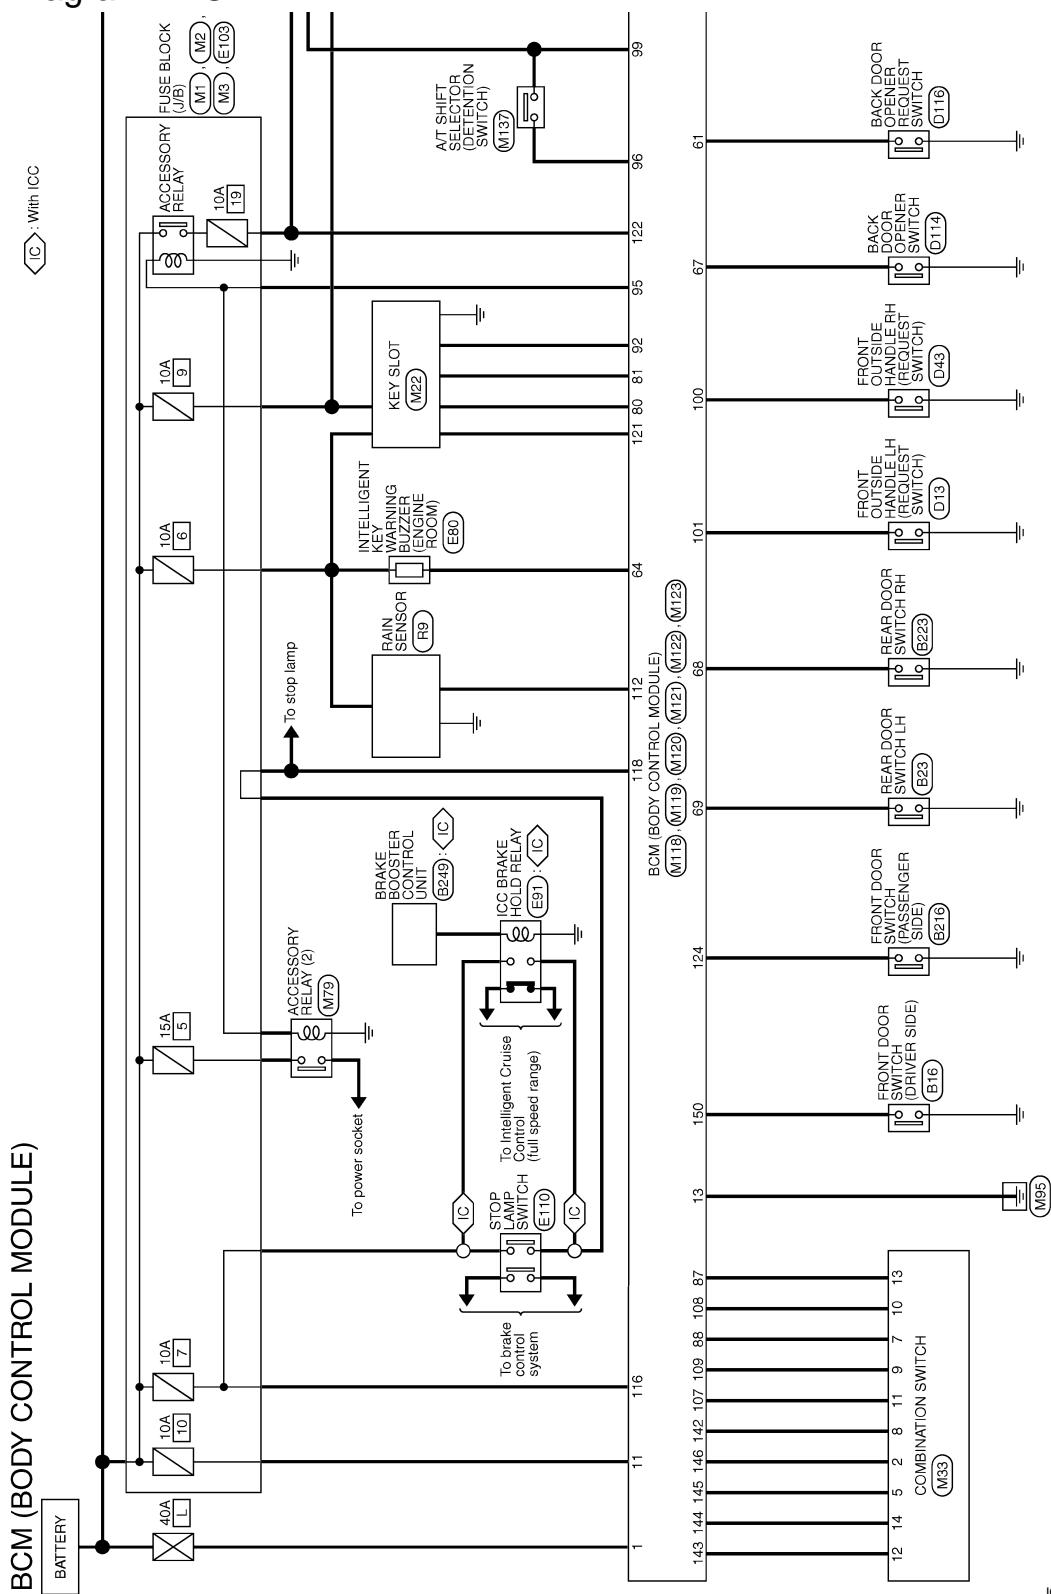
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - BCM -

INFOID:0000000004156264




JCMWM1990GB

2008/03/04

BCM (BODY CONTROL MODULE)
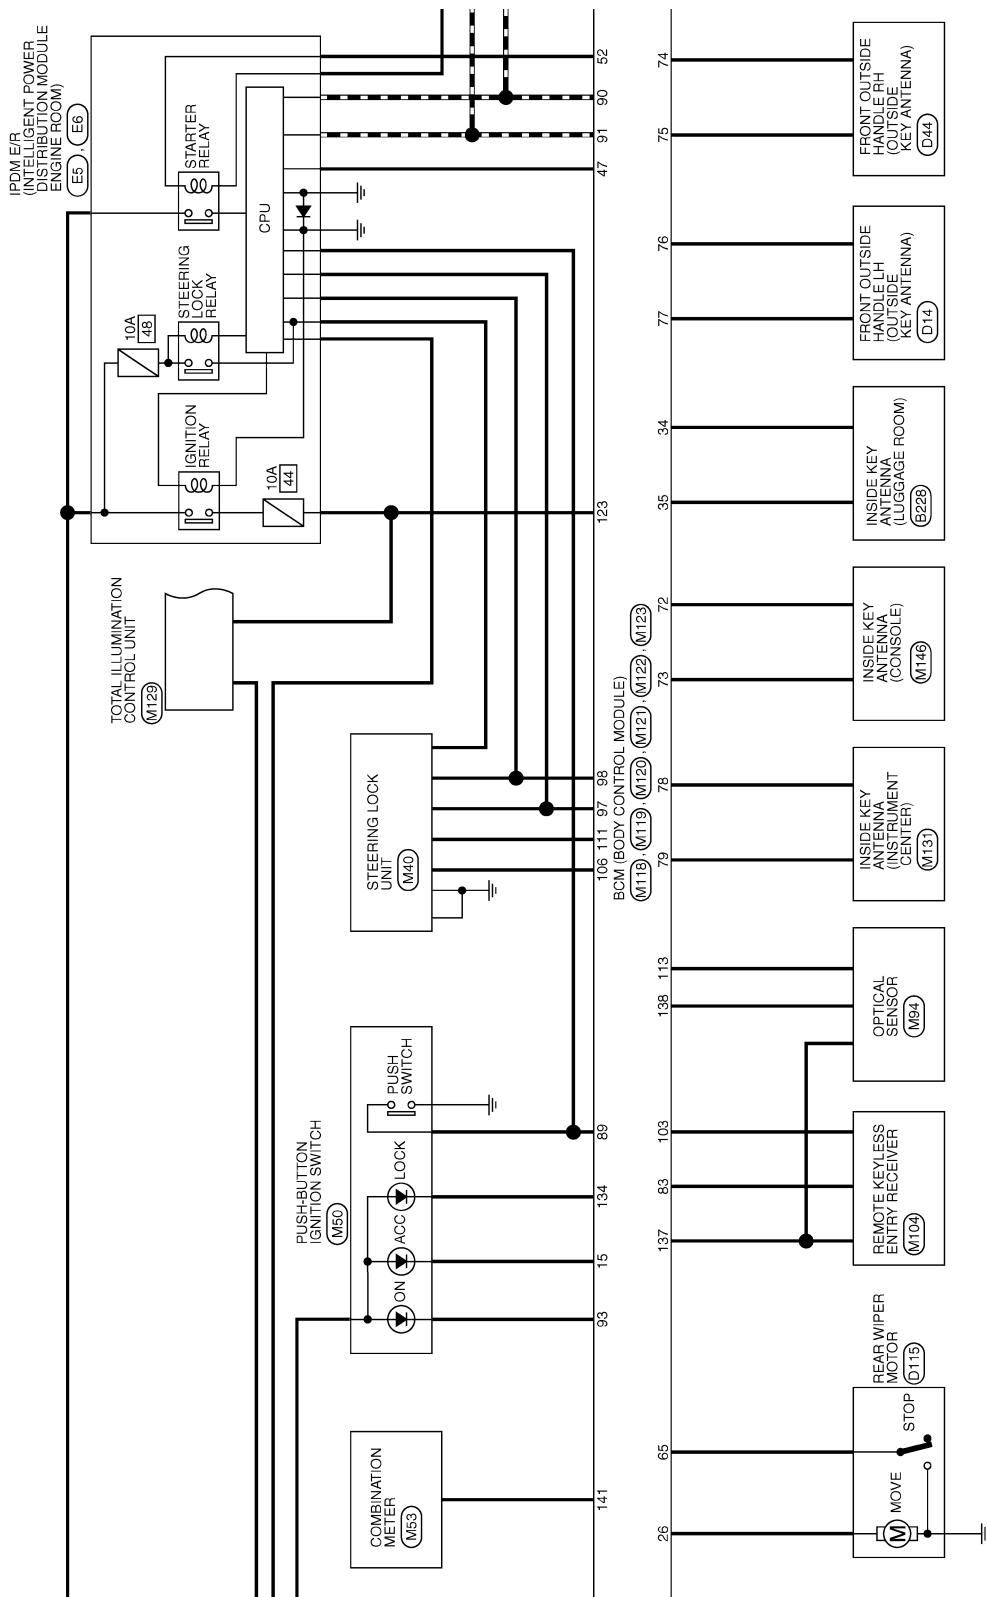
< ECU DIAGNOSIS INFORMATION >




JCMW1991GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
DEF

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

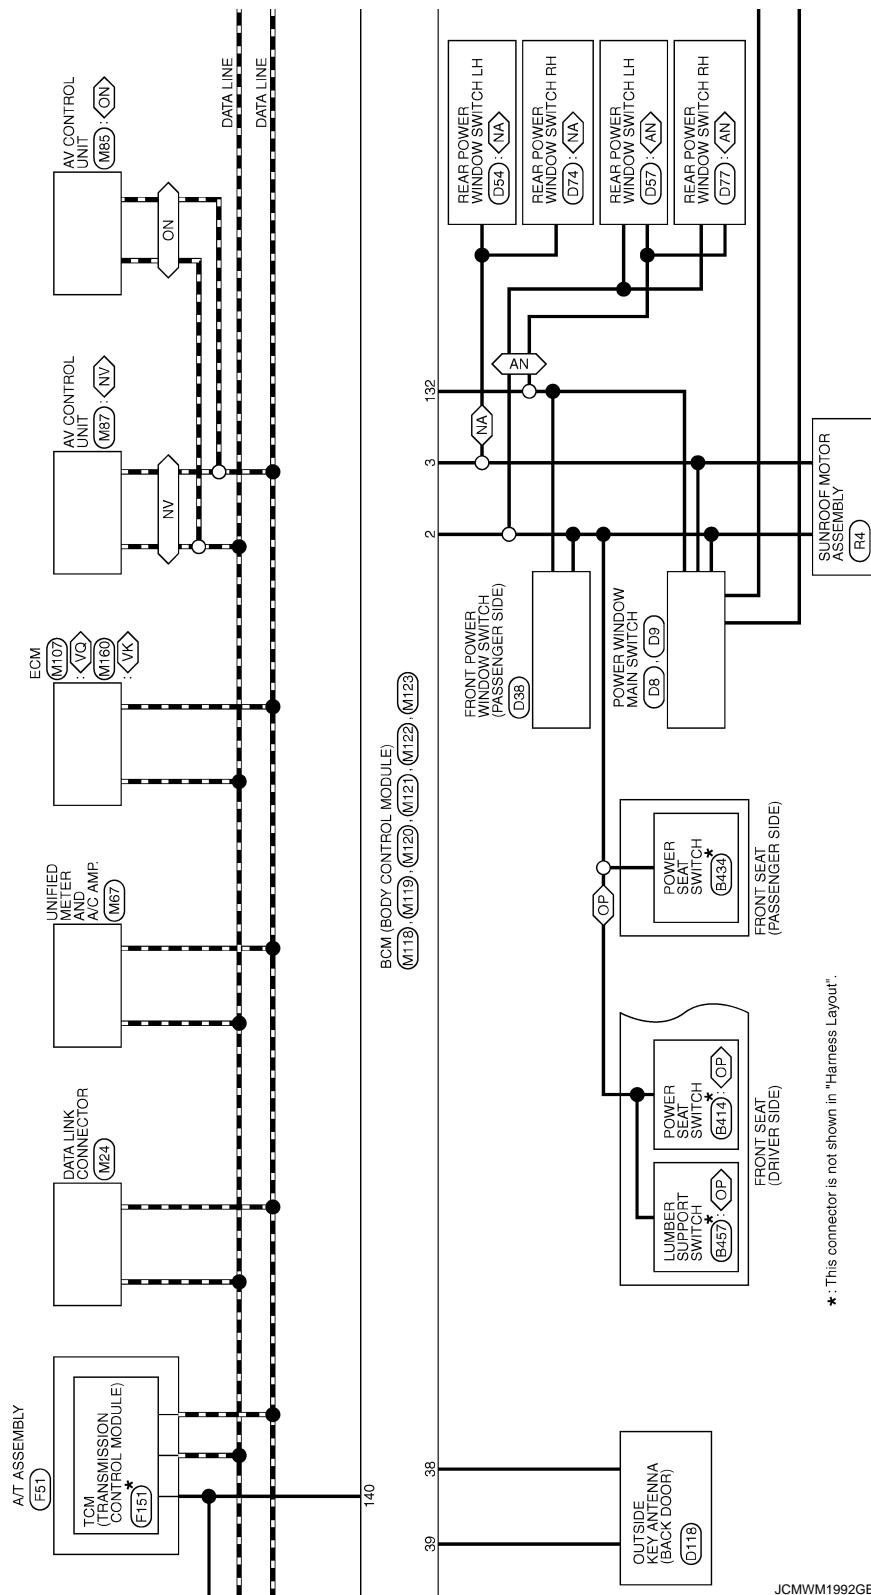- : With VQ engine
- : With VK engine
- : With NAV
- : Without NAV
- : Without automatic drive positioner
- : With rear anti-pinch system
- : Without rear anti-pinch system




* : This connector is not shown in "Harness Layout".

JCMWM1992GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

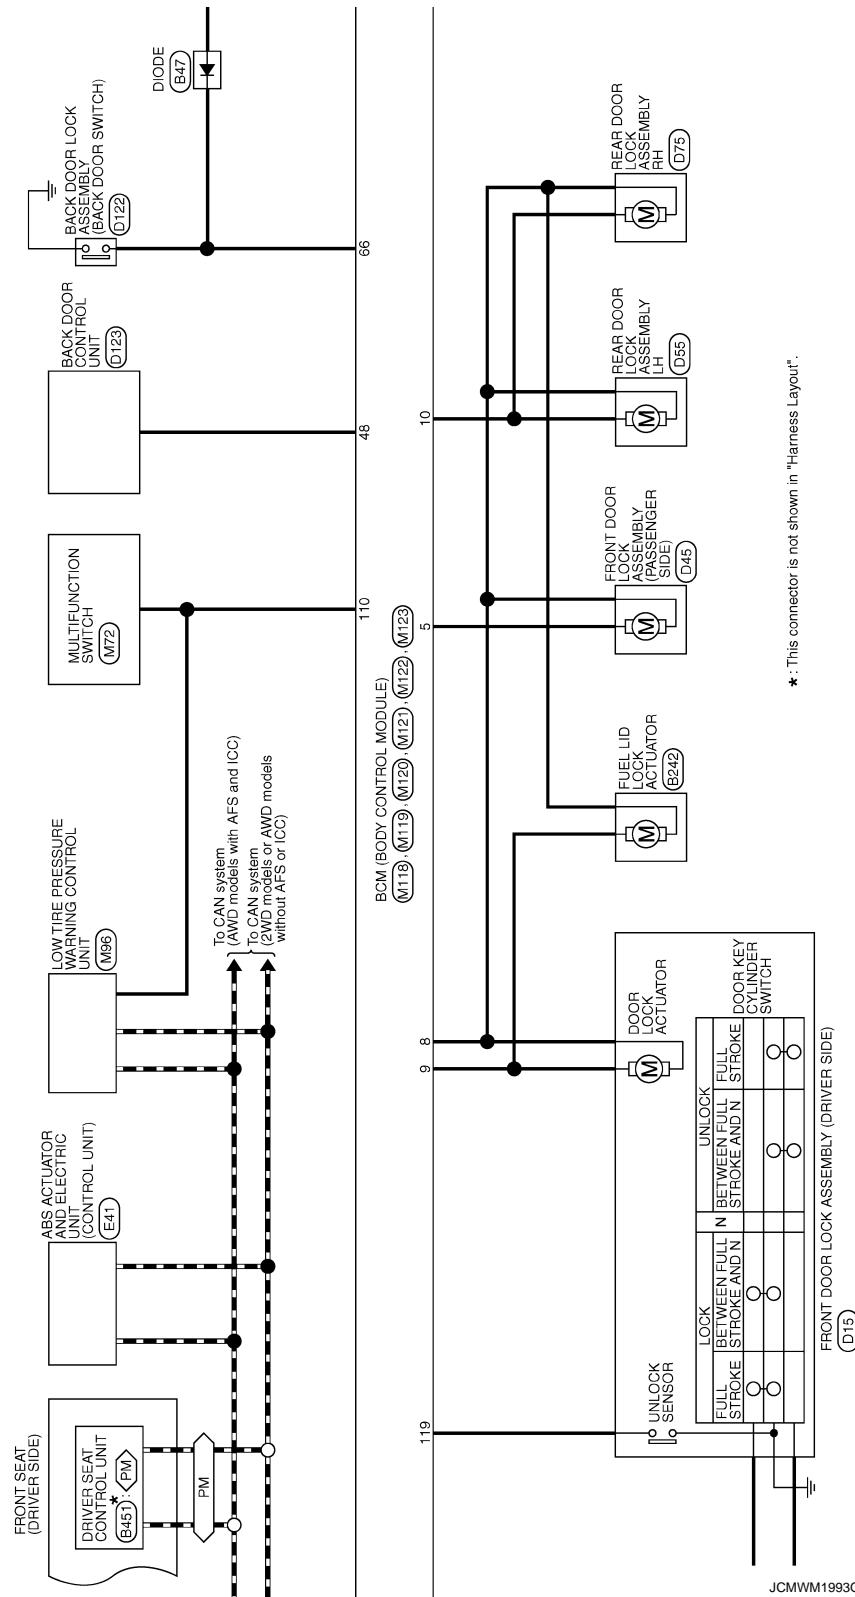 : With automatic drive positioner




JCMW1993GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
DEF

BCM (BODY CONTROL MODULE)
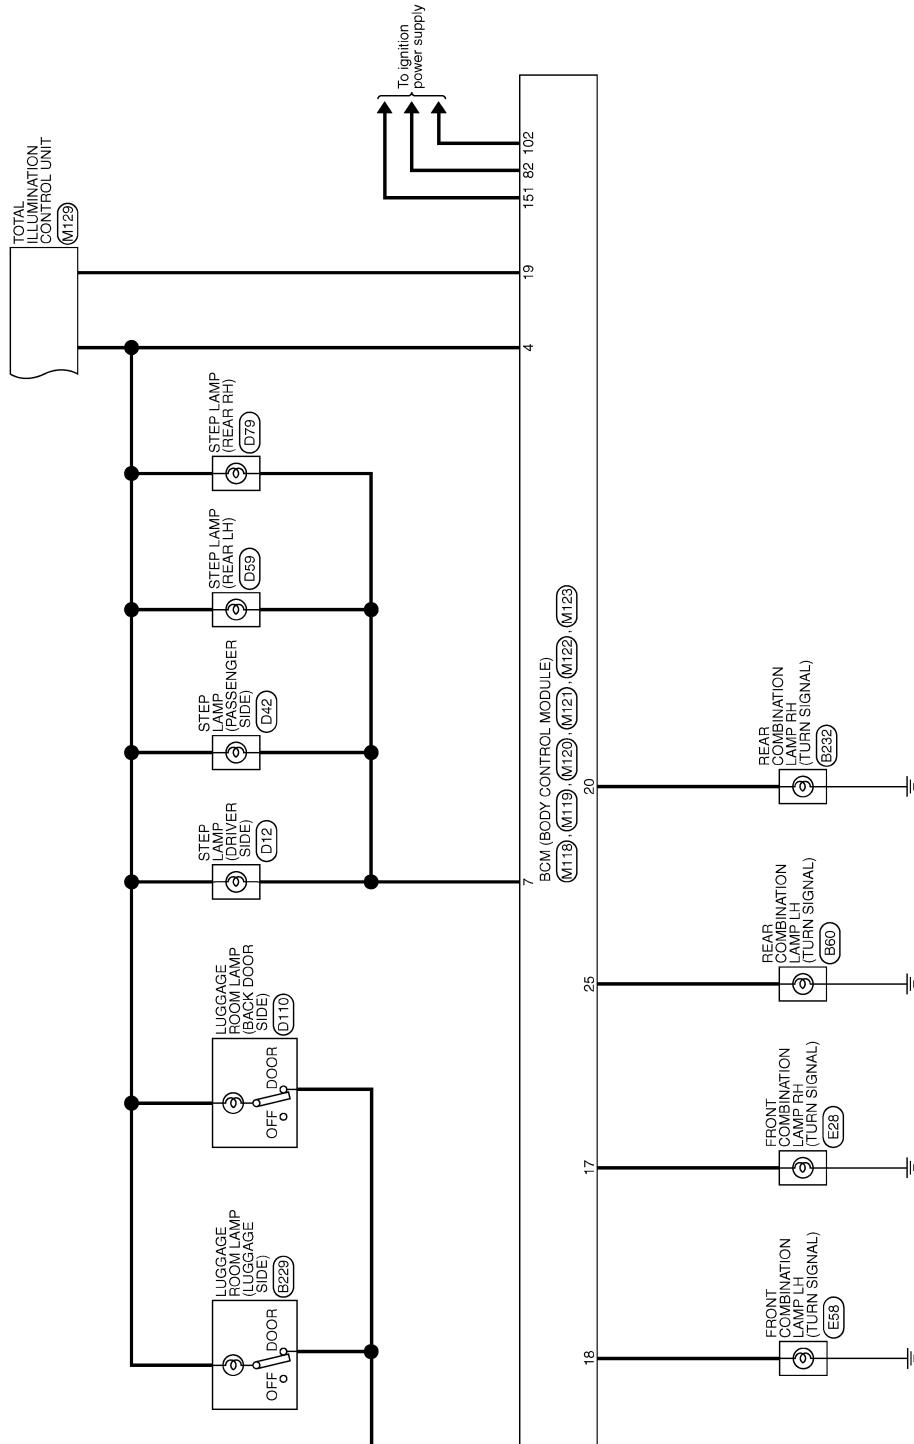
< ECU DIAGNOSIS INFORMATION >



JCMWM1994GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| BCM (BODY CONTROL MODULE) | | | |
|---------------------------|--------------------|-------------------------------|---------------------------|
| Connector No. | M33 | Connector No. | M118 |
| Connector Name | COMBINATION SWITCH | Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH16FW-NH | Connector Type | MD35B-LC |
| | | | |
| | | | |
| BCM (BODY CONTROL MODULE) | | | |
| Terminal No. | Color of Wire | Signal Name [Specification] | |
| 2 | SB | OUTPUT 4 | |
| 5 | L | OUTPUT 3 | |
| 7 | V | INPUT 3 | |
| 8 | O | OUTPUT 5 | |
| 9 | Y | INPUT 2 | |
| 10 | R | INPUT 4 | |
| 11 | LG | INPUT 1 | |
| 12 | P | OUTPUT 1 | |
| 13 | BR | INPUT 5 | |
| 14 | G | OUTPUT 2 | |
| BCM (BODY CONTROL MODULE) | | | |
| Terminal No. | Color of Wire | Signal Name [Specification] | |
| 21 | V | TURN SIGNAL RH (REAR) | |
| 25 | G | TURN SIGNAL LH (REAR) | |
| 26 | G | REAR WIPER OUTPUT | |
| BCM (BODY CONTROL MODULE) | | | |
| Terminal No. | Color of Wire | Signal Name [Specification] | |
| 34 | SB | LUGGAGE ROOM ANT- | |
| 35 | V | LUGGAGE ROOM ANT+ | |
| 38 | B | BACK DOOR ANT- | |
| 39 | W | BACK DOOR ANT+ | |
| 47 | Y | IGN RELAY UPLINE/FIRE CONT | |
| 48 | W | BK DOOR OPENER SW OPERATION | |
| 52 | G | STARTER RELAY CONT | |
| 61 | W | BACK DOOR OPENER REQUEST SW | |
| 64 | L | THEFT ALARM BUZZER (ENG ROOM) | |
| 65 | O | REAR WIPER STOP POSITION | |
| 66 | G | BACK DOOR SW | |

JCMWM1995GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| BCM (BODY CONTROL MODULE) | | Connector No. M122 | | Connector No. M123 | |
|-----------------------------|---------------------------|-----------------------------|---------------------------|-------------------------------------|-------------------------|
| Connector Name | BCM (BODY CONTROL MODULE) | Connector Name | BCM (BODY CONTROL MODULE) | Connector Type | TH40FB-NH |
| 83 | GR | 83 | GR | KEYLESS ENTRY RECEIVER SIGNAL | |
| 87 | BR | 87 | BR | COMBI SW INPUT 5 | |
| 88 | V | 88 | V | COMBI SW INPUT 3 | |
| 89 | SB | 89 | SB | PUSH SW | |
| 90 | P | 90 | P | CAN-H | |
| 91 | L | 91 | L | CAN-L | |
| 92 | LG | 92 | LG | KEY SLOT TLL | |
| 93 | V | 93 | V | ON IND | |
| 95 | O | 95 | O | ACC RELAY CONT | |
| 96 | GR | 96 | GR | A-T SHIFT SELECTOR POWER SUPPLY | |
| 97 | L | 97 | L | SIL CONDITION 1 | |
| 98 | P | 98 | P | SIL CONDITION 2 | |
| 99 | R | 99 | R | SHIFT P | |
| 100 | G | 100 | G | PASSENGER DOOR REQUEST SW | |
| 101 | SB | 101 | SB | DRIVER DOOR REQUEST SW | |
| 102 | O | 102 | O | BLOWER FAN MOTOR RELAY CONT | |
| 103 | BR | 103 | BR | KEYLESS ENTRY RECEIVER POWER SUPPLY | |
| 106 | W | 106 | W | S/L UNIT POWER SUPPLY | |
| 107 | G | 107 | G | COMBI SW INPUT 1 | |
| 108 | R | 108 | R | COMBI SW INPUT 4 | |
| 109 | Y | 109 | Y | COMBI SW INPUT 2 | |
| 110 | G | 110 | G | HAZARD SW | |
| 111 | GR | 111 | GR | S/L UNIT COMM | |
| 112 | W | 112 | W | IMMOBILANTENNA SIGNAL | |
| 113 | P | 113 | P | IGN RELAY (F/B) CONT | |
| Signal Name [Specification] | | Signal Name [Specification] | | Signal Name [Specification] | |
| 72 | R | 72 | R | ROOM ANT2- | RAIN SENSOR SERIAL LINK |
| 73 | G | 73 | G | ROOM ANT2- | OPTICAL SENSOR |
| 74 | SB | 74 | SB | PASSENGER DOOR ANT- | STOP LAMP SW 1 |
| 75 | BR | 75 | BR | PASSENGER DOOR ANT+ | STOP LAMP SW 2 |
| 76 | V | 76 | V | DRIVER DOOR ANT- | DR DOOR UNLOCK SENSOR |
| 77 | LG | 77 | LG | DRIVER DOOR ANT+ | KEY SLOT SW |
| 78 | Y | 78 | Y | ROOM ANT1- | ACC F/B |
| 79 | BR | 79 | BR | ROOM ANT1+ | IGN F/B |
| 80 | GR | 80 | GR | IMMOB ANTENNA CONTROL | PASSENGER DOOR SW |
| 81 | W | 81 | W | IMMOB ANTENNA SIGNAL | POWER WINDOW SW COMM |
| 82 | P | 82 | P | IGN RELAY (F/B) CONT | LOCK IND |

JCMWM1996GB

INFOID:0000000005176865

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|-------------------------|---|
| B2013: ID DISCORD BCM-S/L | Inhibit engine cranking | Erase DTC |
| B2014: CHAIN OF S/L-BCM | Inhibit engine cranking | Erase DTC |
| B2190: NATS ANTENNA AMP | Inhibit engine cranking | Erase DTC |
| B2191: DIFFERENCE OF KEY | Inhibit engine cranking | Erase DTC |
| B2192: ID DISCORD BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2193: CHAIN OF BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2195: ANTI SCANNING | Inhibit engine cranking | Ignition switch ON → OFF |
| B2557: VEHICLE SPEED | Inhibit steering lock | When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms |
| B2560: STARTER CONT RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal |
| B2601: SHIFT POSITION | Inhibit steering lock | 500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN) |
| B2602: SHIFT POSITION | Inhibit steering lock | 5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more |
| B2603: SHIFT POSI STATUS | Inhibit steering lock | 500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V) |
| B2604: PNP SW | Inhibit steering lock | 500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF |
| B2605: PNP SW | Inhibit steering lock | 500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Power position: IGN • Selector lever P/N position signal: Except P and N positions (0 V) • Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON |
| B2606: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal) |

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|--|---|
| B2607: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal) |
| B2608: STARTER RELAY | Inhibit engine cranking | 500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN) |
| B2609: S/L STATUS | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock | When the following steering lock conditions agree <ul style="list-style-type: none"> • BCM steering lock control status • Steering lock condition No. 1 signal status • Steering lock condition No. 2 signal status |
| B260A: IGNITION RELAY | Inhibit engine cranking | 500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal) |
| B260F: ENG STATE SIG LOST | Maintains the power supply position attained at the time of DTC detection | When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN) |
| B2612: S/L STATUS | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock | When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Steering lock unit status signal (CAN) is received normally • The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R) |
| B2617: STARTER RELAY CIRC | Inhibit engine cranking | 1 second after the starter motor relay control inside BCM becomes normal |
| B2618: BCM | Inhibit engine cranking | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal |
| B2619: BCM | Inhibit engine cranking | 1 second after the steering lock unit power supply output control inside BCM becomes normal |
| B261E: VEHICLE TYPE | Inhibit engine cranking | BCM initialization |
| B26E9: S/L STATUS | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock | When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> • Steering condition No. 1 signal: LOCK (0 V) • Steering condition No. 2 signal: LOCK (Battery voltage) |

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while activating the hazard warning lamp.

FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF \Rightarrow ON and front wiper switch is INT position, BCM operates a fail-safe control.

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stops.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

DTC Inspection Priority Chart

INFOID:000000004156266

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC |
|----------|---|
| 1 | B2562: LOW VOLTAGE |
| 2 | <ul style="list-style-type: none">• U1000: CAN COMM• U1010: CONTROL UNIT (CAN) |
| 3 | <ul style="list-style-type: none">• B2190: NATS ANTENNA AMP• B2191: DIFFERENCE OF KEY• B2192: ID DISCORD BCM-ECM• B2193: CHAIN OF BCM-ECM• B2195: ANTI SCANNING |
| 4 | <ul style="list-style-type: none">• B2013: ID DISCORD BCM-S/L• B2014: CHAIN OF S/L-BCM• B2553: IGNITION RELAY• B2555: STOP LAMP• B2556: PUSH-BTN IGN SW• B2557: VEHICLE SPEED• B2560: STARTER CONT RELAY• B2601: SHIFT POSITION• B2602: SHIFT POSITION• B2603: SHIFT POSI STATUS• B2604: PNP SW• B2605: PNP SW• B2606: S/L RELAY• B2607: S/L RELAY• B2608: STARTER RELAY• B2609: S/L STATUS• B260A: IGNITION RELAY• B260B: STEERING LOCK UNIT• B260C: STEERING LOCK UNIT• B260D: STEERING LOCK UNIT• B260F: ENG STATE SIG LOST• B2612: S/L STATUS• B2614: ACC RELAY CIRC• B2615: BLOWER RELAY CIRC• B2616: IGN RELAY CIRC• B2617: STARTER RELAY CIRC• B2618: BCM• B2619: BCM• B261A: PUSH-BTN IGN SW• B261E: VEHICLE TYPE• B26E9: S/L STATUS• B26EA: KEY REGISTRATION• U0415: VEHICLE SPEED SIG |
| 5 | <ul style="list-style-type: none">• B2621: INSIDE ANTENNA• B2622: INSIDE ANTENNA• B2623: INSIDE ANTENNA |
| 6 | B26E7: TPMS CAN COMM |

DTC Index

INFOID:000000004156267

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-16. "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition | Intelligent Key warning lamp ON | Reference page |
|---|-----------|--|---------------------------------|------------------------|
| No DTC is detected. Further testing may be required. | — | — | — | — |
| U1000: CAN COMM | — | — | — | BCS-34 |
| U1010: CONTROL UNIT (CAN) | — | — | — | BCS-35 |
| U0415: VEHICLE SPEED SIG | — | — | — | BCS-36 |
| B2013: ID DISCORD BCM-S/L | × | × | — | SEC-50 |
| B2014: CHAIN OF S/L-BCM | × | × | — | SEC-51 |
| B2190: NATS ANTENNA AMP | × | — | — | SEC-42 |
| B2191: DIFFERENCE OF KEY | × | — | — | SEC-45 |
| B2192: ID DISCORD BCM-ECM | × | — | — | SEC-46 |
| B2193: CHAIN OF BCM-ECM | × | — | — | SEC-48 |
| B2195: ANTI SCANNING | × | — | — | SEC-49 |
| B2553: IGNITION RELAY | — | × | — | PCS-50 |
| B2555: STOP LAMP | — | × | — | SEC-54 |
| B2556: PUSH-BTN IGN SW | — | × | × | SEC-56 |
| B2557: VEHICLE SPEED | × | × | × | SEC-58 |
| B2560: STARTER CONT RELAY | × | × | × | SEC-59 |
| B2562: LOW VOLTAGE | — | × | — | BCS-37 |
| B2601: SHIFT POSITION | × | × | × | SEC-60 |
| B2602: SHIFT POSITION | × | × | × | SEC-63 |
| B2603: SHIFT POSI STATUS | × | × | × | SEC-65 |
| B2604: PNP SW | × | × | × | SEC-68 |
| B2605: PNP SW | × | × | × | SEC-70 |
| B2606: S/L RELAY | × | × | × | SEC-72 |
| B2607: S/L RELAY | × | × | × | SEC-73 |
| B2608: STARTER RELAY | × | × | × | SEC-75 |
| B2609: S/L STATUS | × | × | × | SEC-77 |
| B260A: IGNITION RELAY | × | × | × | PCS-52 |
| B260B: STEERING LOCK UNIT | — | × | × | SEC-81 |
| B260C: STEERING LOCK UNIT | — | × | × | SEC-82 |
| B260D: STEERING LOCK UNIT | — | × | × | SEC-83 |
| B260F: ENG STATE SIG LOST | × | × | × | SEC-84 |
| B2612: S/L STATUS | × | × | × | SEC-88 |
| B2614: ACC RELAY CIRC | — | × | × | PCS-54 |
| B2615: BLOWER RELAY CIRC | — | × | × | PCS-56 |
| B2616: IGN RELAY CIRC | — | × | × | PCS-58 |
| B2617: STARTER RELAY CIRC | × | × | × | SEC-92 |
| B2618: BCM | × | × | × | PCS-60 |
| B2619: BCM | × | × | × | SEC-94 |
| B261A: PUSH-BTN IGN SW | — | × | × | SEC-95 |
| B261E: VEHICLE TYPE | × | × | × (Turn ON for 15 seconds) | SEC-98 |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition | Intelligent Key warning lamp ON | Reference page |
|-------------------------|-----------|--|---------------------------------|------------------------|
| B2621: INSIDE ANTENNA | — | × | — | DLK-61 |
| B2622: INSIDE ANTENNA | — | × | — | DLK-63 |
| B2623: INSIDE ANTENNA | — | × | — | DLK-65 |
| B26E7: TPMS CAN COMM | — | — | — | BCS-38 |
| B26E9: S/L STATUS | × | × | × | SEC-86 |
| B26EA: KEY REGISTRATION | — | × | × | SEC-87 |

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE.

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE.

Diagnosis Procedure

INFOID:0000000003842809

1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.

Refer to [DEF-9, "BCM : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK REAR WINDOW DEFOGGER SWITCH

Check rear window defogger switch.

Refer to [DEF-10, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK REAR WINDOW DEFOGGER RELAY

Check rear window defogger relay.

Refer to [DEF-11, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-35, "Intermittent Incident"](#).

NO >> GO TO 1.

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE

A

Diagnosis Procedure

INFOID:000000003842810

1. CHECK REAR WINDOW DEFOGGER

Check rear window defogger.

Refer to [DEF-13, "Component Function Check"](#).

B

Is the inspection result normal?

C

YES >> GO TO 2.

D

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

E

Confirm the operation again

F

Is the inspection result normal?

G

YES >> Check intermittent incident. Refer to [GI-35, "Intermittent Incident"](#).

H

NO >> GO TO 1.

I

J

K

DEF

M

N

O

P

DOOR MIRROR DEFOGGER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

DOOR MIRROR DEFOGGER DOES NOT OPERATE BOTH SIDES

BOTH SIDES : Diagnosis Procedure

INFOID:000000003842811

1. CHECK DOOR MIRROR DEFOGGER

Check door mirror defogger.

Refer to [DEF-16, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-35, "Intermittent Incident"](#).

NO >> GO TO 1.

DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:000000003842812

1. CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

Check driver side door mirror defogger.

Refer to [DEF-17, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-35, "Intermittent Incident"](#).

NO >> GO TO 1.

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000003842813

1. CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER.

Check passenger side door mirror defogger.

Refer to [DEF-19, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-35, "Intermittent Incident"](#).

NO >> GO TO 1.

ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED

< SYMPTOM DIAGNOSIS >

ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED

Diagnosis Procedure

INFOID:000000003842814

1. CHECK AV CONTROL UNIT FUNCTION

Check that the AV control unit is operating normally.

- Without navigation system. Refer to [AV-14, "Work Flow"](#).
- With navigation (single monitor) system. Refer to [AV-274, "Work Flow \(Multi AV\)"](#).
- With navigation (twin monitor) system. Refer to [AV-609, "Work Flow \(Multi AV\)"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-35, "Intermittent Incident"](#).

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE

Diagnosis Procedure

INFOID:0000000003842815

1.CHECK MULTIFUNCTION SWITCH (REAR WINDOW DEFOGGER SWITCH)

Check rear window defogger operation.

YES >> Replace multifunction switch (rear window defogger switch). Refer to [AV-262, "Removal and Installation"](#)

NO >> Check rear window defogger system. Refer to [DEF-3, "Work Flow"](#)

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000005188067

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

FILAMENT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

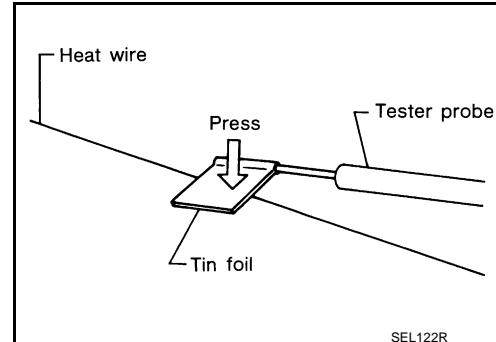
FILAMENT

Inspection and Repair

INFOID:000000003842817


INSPECTION

- When measuring voltage, wrap tin foil around the top of the negative probe. Then press the foil against the wire with finger.




SEL122R

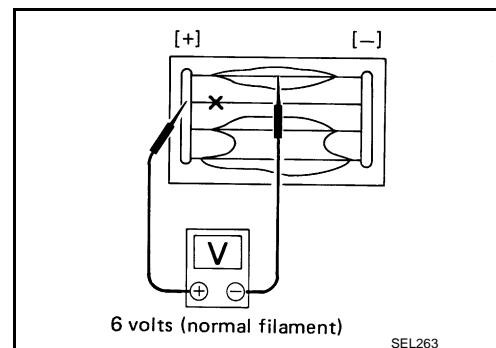- Attach probe circuit tester (in Volt range) to middle portion of each filament.



SEL263

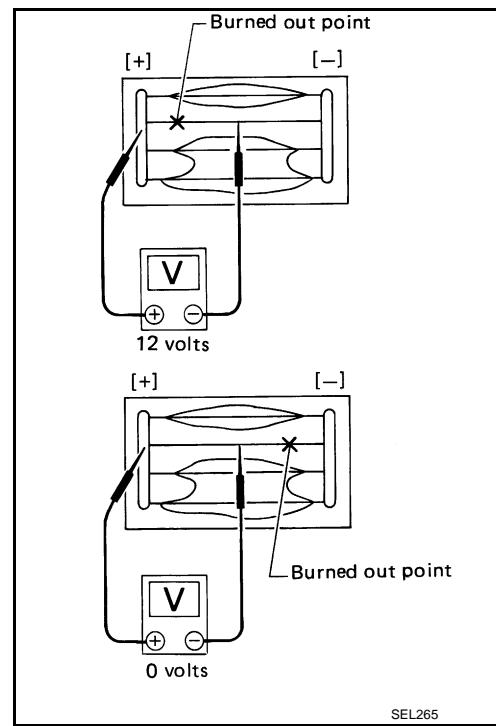- If a filament is burned out, circuit tester registers 0 or battery voltage.
- To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes the point.



SEL265

REPAIR

REPAIR EQUIPMENT

- Conductive silver composition (Dupont No. 4817 or equivalent)

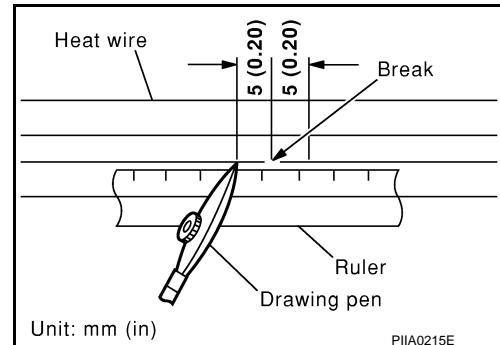
FILAMENT

< REMOVAL AND INSTALLATION >


- Ruler 30 cm (11.8 in) long
- Drawing pen
- Heat gun
- Alcohol
- Cloth

REPAIRING PROCEDURE

1. Wipe broken heat wire and its surrounding area clean with a stop cloth dampened in alcohol.
2. Shake silver composition container before use.
Apply a small amount of conductive silver composition to tip of drawing pen.
3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.



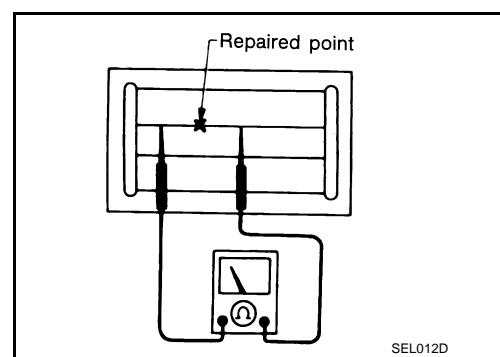4. After repair is completed, check repaired wire for continuity. This check must be conducted 10 minutes after silver composition is deposited.
Do not touch repairing area while test is being conducted.



5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. The minimum distance of 3 cm (1.2 in) must be kept between repaired area and hot air outlet.
If a heat gun is not available, let the repaired area dry for 24 hours.

